

Vintage Auto Warehouse LLC

Product List

Item	Description
key holder	Dealer leather key holder
KitH	Horn button internal contact kit - 4pcs, '40-'41
knob	Throttle knob, '41 LZ
L'37 Plastic	Glove box pull
L'40 LC metal repair	Install floors, door hinges, rockers etc
L'40 LC plastic per list	1940 LC plastic parts
L'41 LC plastic	1941 LC Interior plastic parts set
L'42 LC Plastic parts	Interior door latch buttons (2)-\$50..Interior do...
L-2 H Case	Group 2 battery case milled for optima insertion.
L-55-6600	Loil pump, 55 Linc
L-D601-A	Thick headed hex bolts and lock washers for ti...
L-hydro TC-1	Cylinder, LZ Convertible top
L-JRM21	Conv. top control knob
L-LC wiring	Complete wiring harnesses, '46-8 LC
L-R-27	Hood to cowl round bumper, pr.
L-R-91-21	Special drilled thick head bolt and safety wire f...
L 04621-A, BB	Bearing, pinion
L 9288, 8L	Flex fuel line, '49-'51 Lincoln (7HC 9288?)
L moleskin	Moleskin to be applied with contact cement
L whisker	Chrome bead whisker moulding
L002	gear shift cover
L01012, B	Wheel lug nut
L01015-A, 68	Wheel assy,'36-'38, 10.25' bolt pattern
L01015-clip	'40-'48 wheel hubcap clip
L01015, 06H	Wheel, 1940
L01015, 16H	Wheel assy, 16' X 5.5', 1941 only
L01015, 5EH	Wheel, 15', '42-48
L01015, 8EL	Wheel rim, '49-'51 Lincoln
L01015caps	Valve stem caps, Shraeder, 4 plus spare valv...
L01105-A, H	Brake drum, front, '26-'38, used with 68-1015-A-
L01105, 06H	Hub & brake drum assay, front, '38-'40, appro...
L01105, 16H	Hub & brake drum assy, front, 1941, approx 5...
L01105, 26H	Hub and brake drum Assy., 1942-1948, New ...
L01107, 68	Wheel stud
L01107, 86H	Wheel studs
L01107, 96 H	Wheel stud, locater type2 - 1/6' long
L01115-puller	Rear Hub Puller
L01115, 06H	Brake hub and drum assy, rear, '38-'40, if new...
L01130-A, 26H	Hubcap, 1942
Item	Description
L01130-A, 5EH	Hub cap, 1946
L01130-A, HB	Hubcap, '37-'38
L01130-B, 26H	Spare wheel hubcap, '42-8 LC
L01130-B, 5EH	Spare wheel hub cap, '47-8 LC
L01130-B,86H	Hubcap, '38-'39
L01130-C, 16H	Spare wheel hubcap, '41 LC
L01130, 06H	Hubcap, '40
L01130, 16H	Hubcap, '41
L01130, 5EH	Hubcap, rear wheel, '47-8
L01130, 6H	Hub cap, Front, '47-8
L01139	Grease cap, threaded
L01139, 51A	Front hub grease cap

L01139, 68	Grease retainer cap, threaded
L01140-B, 16H	Hubcap, '41
L01140, 96H	Hubcap, used, '39
L01141-A, 26H	Hubcap medalion, '42 front wheel
L01141-B, 5EH	Spare hubcap L.C. script
L01141, 16H	Spare tire hubcap L.C. script, '41 LC
L01141, 6H	Front hubcap with 'Lincoln' in gold script
L01175, 68	Grease retainer, 3.194', '36-9
L01175, 78	Grease retainer, rear wheel bearing, 2.84' O.D.
L01175, B	Rear wheel grease seals, '36, pr.
L01180, 78	Snap ring, grease retainer, rear wheel bearing
L01180, B	Snap ring, rearwheel bearing grease seal
L01183	Rear hub nut seal, pr.
L01183, B	Rear wheel hub seals, pr
L01190-A, 48	Front wheel bearing grease seal, pair
L01201/16	Front Wheel Bearing set for one wheel
L01201/16:L01201, B	Wheel bearing, front inner cone and roller ass...
L01201/16:L01202, B	Wheel bearing, front inner race..Timken 15250X
L01201/16:L01216, B	Wheel bearing, front cone & roller..Timken 09...
L01201/16:L01217	Race, wheel bearing, outer..Timken 09196
L01209, B	Spotlight bulb
L01225, 86H)-(66)	Rear Wheel Bearing
L01395	Spare wheel cover assy, '42-8
L01395-rub	Bumper, spare cover, set w/screws
L01395-welt	Spare wheel cover plate anti-squeak
L01395, 26H	Spare wheel cover assy.
L01396, 06H	Spare wheel cover assy.
L01433-B	Spare wheel retainer bracket
L01433-bolt	Spare wheel retainer bracket bolt
L01462, 06H	Spare wheel lock nut
L02004, 91A	Master cylinder rebuilding kit
L02011, 16H	Brake backing plate, front, 1941
L02018, 86H	Brake shoes w/riveted lining, '36-8, pair
L02018, HB	Primary brake shoe, NOS, riveted '36-'38
L02019, 86H	Secondary brake shoe, NOS riveted, '36-8
L02019, HB	Brake shoe w/riveted lining, nos, '36-8
L02027, 96H	Brake shoe anchor pin
L02035 kit	Brake spring kit, complete, single axle set
L02035, H	Spring, secondary brake shoe retracting (4 re...
L02036, 96H	Brake shoe retractor spring
L02036, H	Spring, primary brake shoe retracting
L02045, 48	Hand brake equalizer pin
L02046, H	Brake shoe adjuster
L02049, H	Brake adjuster spring
L02053-B, 96H	Emergency brake cable, '39
L02055, H	Spring, Brake actuating lever
L02056, 59A	Brake backing plate to spindle square head b...
L02060, 16H	Front wheel grease retainer, '41-'48
L02060, 96H	Baffle Assembly, front grease retainer, '36-'40
L02061-rep	Wheel cyl repair kit, 1 1/8'
L02061, 96H	Brake cyl RF
L02062-rep	Repair kit, 1' wheel cyl
L02062, 96H	Brake cyl., LF
L02066 kit, H	Cup, brake shoe hold-down kit (two shoes)
L02067, H	Cup, brake shoe hold-down '36-'48
L02068	Spring, Brake shoehold down

Item	Description
L02068, H	Brakeshoe hold-down spring
L02069-A, H	Pin, brake shoe hold-down
L02074, 16H	Brake line tee, rear axle

L02075, 96H	Brake line brass tee at LF wheel
L02076, 96H	Master cyl banjo fitting
L02078,8A	Rear Brake Hose
L02079, 96H	Brake hose
L02092, H	Brake adjusting hole cover
L02094	Brake shoe hold down spring kit
L02109, 96H	Hand brake strut and sleeve assembly, LH
L02110, 96H	Rear brake operating lever, RH, '39-'48
L02111, 96H	Rear brake operating lever, '39-'48
L02119, 91A	Hand brake cable equalizer
L02121,91A	Hand brake cable clevis
L02131, 91D	Fitting, brake line to rear brake cyl., '39-'48
L02139-B, 96H	Brake shoe-hand brake strut spring
L02140, 91A	Brake master cylinder
L02140cvr	Master brake cylinder filler cover plate
L02143, 91A	Master cylinder link assembly (push rod)
L02149, 91A	Copper sealing washer rear brake cyl to brass...
L02150, 91A	Banjo fitting bolt, front brake hose
L02151, 91A	Brake master cylinder seal ring, rear
L02152, 91A	Brake master cylinder copper seal ring, front
L02160-A, 96H	Main brake lines to master cyl connector for al...
L02160-b, 96H	Connector, main brake lines, LZ cabriolets an...
L02162, 8C	Wagner master cylinder cap
L02180-A, 91A	Brake Master Cylinder Boot
L02191/2192adapt	Brass adaptor, rear brake cylinder to brake lin...
L02192-rep.	Brake rear wheel cyl. repair kit, 1'
L02198	Wheel cylinder piston, 1 1/8'
L02211, 16H	Brake backing plate-RR
L02212, 16H	Brake backing plate, LR
L02221, 91A	Emergency brake adjusting clevis
L02248, 59A	Bolt, rear brake backing plate, square head, 1/...
L02249, 59A	Bolt (rear axle backing plate, square head 1/2"...
L02261, 96H	Brake Cyl., RR
L02262, 96H	Brake Cyl LR
L02263-A, 96H	Brake line, Front, '39-'48, except '40 LC cabrio...
L02263-B, 96H	Brake line to right front, '39-'41 LZ and '40 LC ...
L02264, 96H	Main brake lines (2 required)
L02265-7, 16H	Brake lines, wire wrapped, set of3
L02265-A, 96H	Brake line - master cylto main brake line, LZ '...
L02265-B, 96H	Brake line, master cyl to main line, '39-48 LZ ...
L02265/7/8	Brake lines,wire wrapped, 3 piece set, rear axl...
L02265/7/8:L02263,-A, 96H	Brake line to right front, '39-'48
L02265/7/8:L02367, 96H	Brake line, pre-bent, wire wrapped, '39-'48
L02267-A, 96H	Rear brake line to RR, std axle
L02267-B, 96H	Brake line, Columbia rear axle
L02268, 96H	Left rear brake line., wire wrapped
L02273, 91A	Emergency brake to frame grommet
L02275, 16H	Emergency brake cable, rear, 39-'48
L02424, 06H	Extention, brake/clutch pedal, LC '40-'48
L02454, 11A	Clutch & brake pedal pad
L02454, HB	Clutch/brake pedal, repro, authentic
L02454, HBr	Brake & clutch pedal, pr repro, '36-'48 Lincoln
L02460, 78	Hand brake adjusting clevis
L02472, 86H	Brake and clutch pedal retracting spring, '38-'...
L02474, 86H	Brake pedal retracting spring extension
L02476-A, 91A	Brake/clutch pedal to floor moulded seals
L02476-int	Interior clutch & brake to floorboard seals, pr
L02476, 91A	Brake and clutch arm to floor board seals (clut...
L02476/7527	Pedal weather seals., '39-'48
L02494, H	Brake cable, front brake, 55 1/4' llong
L02494, H.	Front brake cable, '36/7, 55.25" long

L02498, 86H	Cable & conduit assy, rear brake, '38 only
L02498, H	Cable & conduit assy, rear brake, -85' long fro...
L02644-A, BB	Bushing and seal, clutch pedal extention shaft...
L02814, 78	Brake hose retaining clip

Item	Description
L02814, B	Brake hose retaining clip
L02853-B, 96H	Emergency brake cable, front, 1939 LZ
L02853, 06H	Hand brake front cable assy, '40-'41
L02853, 168H	Emergency brake cable, front, Custom
L02853, 5EH	Emergency brake cable & conduit assy.'46-'48
L02853, 86H	Cable and conduit, hand brake, '36-'38
L02853, 96H	Emergency brake cable, front, '39 LZ
L02853, brkt	Hand Brake Cable 'U' bracket
L02853H, 86H	Hand brake cable
L03010, 26H	Axle assembly, with radius rod and bolts
L03010,96H	Axle, front, '37-'41
L03020-A, 26H	Bumper, overload, front axle
L03020-B, 86H	Bumper, front axle
L03032, 06H	Spring perch bolt
L03032, 26H	Bolt, front axle to radius rod, '42-'48
L03032, HB	Spring perch bolt
L03036, B	Nut, front axle to radius rod bolt
L03105, 26H	Steering knuckle, RH,
L03111, 5EH	King Bolt Repair Kit, '37-'48
L03111, 5EH:L03110, HB	King bolt bushings, brass
L03111, 5EH:L03110, HB:L...	Bushing BRBU 1417
L03111, 5EH:L03115, 5EH	King bolt. '38-'48, pr.
L03111, 5EH:L03122, B	Spindle bolt locking pin
L03111, 5EH:L03123, HB	King bolt bearings, pair
L03111, 5EH:L03125, HB	King bolt end cap
L03111, 5EH:L03288, HB	Spindle bolt felt grease retainer
L03111, 8M	King Bolt repair kit, '49-'51 Lincoln, Mercury
L03270, 11A	Tie-rod end kit , R.H., 1937-1941
L03289-B 11A	Tie rod end assy., '36-'41
L03289, 26H	Tie rod end, '42-'48 original style
L03289,26Hrp	Tie rod end, RH '42-'48
L03290-B, 11A	Tie-rod end, L.H., 1936-1941
L03290, 26H	Tie rod end, LH thread, '42-'48, original style
L03290, 26Hrp	Tie rod end, LH thread, drag link & tie rod, '42...
L03290seal	Tie rod end dust seal
L03304, 26H	Steering drag link tube, '42-'48
L03306-11Akit	Steering drag link assy. w/adj sleeve & tie rod e...
L03306-A, 11Y	Drag link assembly, 1941
L03306, 11Y	Drag link, '37-'40
L03306, 26H	Drag link, adjusting sleeve and left thread tie r...
L03310, 11A	Steering drag link adj sleeve
L03332, 48	Tie rod end seals, set of 4
L03440, 99A	Wishbone ball cap
L03441-A, 86H	Radius rod cap bolt, 7/16" - 20 X 2 1/4"
L03441-B, 86H	Front radius rod cap drilled hex head bolt, 7/1...
L03446, 99A	Front axle radius rod ball
L03504-A, 26H	Steering gear assy, '42-48 Lincoln
L03504-B, 26H	Steering gear assembly, '42-'48 Lincoln Conti...
L03509-G, 16H	Steering column, LC
L03510-A, 5EH	Boot, firewall, inner, gear shift shaft, '40-'48,all
L03512-A, 5EH	Grommet, steering column to firewall, outer, '4...
L03512-A, 96H	Steering column to firewall sponge seal (outsi...
L03512-B, 5EH	Grommet, steering column to firewall, '40-8 LC
L03513-A, 06H	Sponge seal, steering column to firewall, '40-8...
L03513-C, 06H	Sponge seal, steering column to dash, '40-'48...

L03513-C, 40	'Grommet' large square seal (material only)
L03513-C, cover	Steering column firewall seal cover
L03513, H	Grommet, steering column to firewall, inner '3...
L03517-A, 40	Steering column bushing, '36-'41
L03517, 21A	Steering column bearing
L03517, B	Steering column bushing
L03522/24rep	steering worm & sector roller repair kit
L03522XC	Steering sector roller repair kir
I03524-A, 26H	Steering worm gear and shaft, 51.97" overall l...
L03524-B, 26H	Steering shaft and worm assembly, '42-'48 LC
L03524-X, 01T	Steering worm gear, '38-'47 com.
L03524, 8A	steering worm gear
L03532, B	Steering shaft lock sleeve

Item	Description
L03538,	Steering shaft lock sleeve set screws
L03548	Steering gear and shaft assembly
L03552, B	Steering gear worm upper bearing cup
L03552, BB	Steering worm upper bearing race
L03553, 81T	Steering worm gear lower race
L03553, 8A	Steering gear, worm gear race
L03556-A1,99A	Strut Rod Bushings, set of 4
L03563, H	Shim, steering gear shaft- .010" thick
L03571, 68	Worm gear bearing
L03571, 81T	Steering worm roller/cage bearing
L03575-B, HB	Steering sector shaft, '37-'48
L03575-X, 7RC	Sector roller kit
L03575-X, 8A	Sector roller kit
L03575, 01T	Steering sector shaft, truck
L03575, 81T	Truck sector shaft
L03576, 68	Sector shaft bearing
L03576, HB	Steering sector shaft bushing (2 reqd.)
L03580sleve	Ign sw illuminating sleeve
L03581, 78	Steering box gasket set
L03581, AB	Cover gasket
L03581, H	Steering gear box cover gasket
L03590	Pitman arm (steering shaft-to drag link
L03591, 48	Oil seal, sector shaft
L03591, 81T	Steering sector shaft seal
L03591, 8A	Steering gear oil seal
L03593-A/B/C/D	Steering shaft pre-load gasket set:.004/.0055/...
L03593-C, B	.010 shim gasket
L03593-H	Shim (steering gear worm cover gasket) ,005"...
L03599, 06H	Steering wheel core
L03600, 06H	Re-moulded steering wheel, exchange, '40
L03600, 16H	Steering wheel, re-molded, exchange, '41
L03600, 26H	Steering wheel, re-moulded, exchange, '42
L03600, 5EH	Steering wheel, '46-'48, exchange
L03600, 86H	Remould and polish steering wheel
L03624	Horn ring, '41, chrome
L03625-A, 16H	Horn Button, '41
L03626, 26H	Horn button spring, '42-8
L03627-A, 96H	Horn button with emblem, core only
L03627-B, 06H	Horn button, 1940 with custom trim.
L03630, 16H	Insert ring, horn button lock
L03630, 26H	Horn contact plate
L03631, 06H	Contact, horn switch button, '40-1
L03632, 16H	Cushion (horn ring Felt)
L03634-45,26H	Horn ring, medalion and switch assy
L03634-A, 26H	Horn ring, '42-'48
L03634-B, 16H	Horn ring, custom trim (gold)

L03637, 06H	Retainer, horn switch button, '40-'41
L03645-A, 96H	Horn button, '37-'39
L03645, 11A	{Plate assy, horn button index
L03645, 26H	Horn Switch assembly, '42-'48
L03646, 16H	Horn switch contact seat
L03649-A, 5EH	Emblem, horn ring Maroon and silver, 1946 only
L03649, 26H	Horn ring emblem
L03649, 6H	Horn emblem, '47
L03672-A, 26H	Horn button shock pad, '42-'48
L03675-A, 5EH	Lock accy, ignition, '42-8 LZ
L03675-B, 5EH	Lock assy, steering and ignition, '42-8 LC
L03676-A, 96H	Lock assembly, steering and ignition
L03676-A, H,	Ignition lock assy including lock cyl & 2 Hurd ...
L03676-A. 06H	Lock cylinder assy with hurd keys and 2 keye...
L03676, H	Ignition lock assy, less cyl and keys
L03676, HB	Steering lock assy, '37-'38
L03677-A, sleeve	Ignition lock cylinder clear plastic sleeve
L03677-B, sleeve	Ignition lock-to-knob plastic sleeve, '42-'48 LC
L03680	Ignition switch
L03680, 06H	Ignition switch, 1940
L03680, 06H knob	Ignition switch Knob, "40 LC
L03680, 16H	Ignition switch, '40-8

Item	Description
L03682-C, 06H	Shim, steering and ignition lock, .12" thick
L03685	Ignition key, genuine hurd
L03685, 91A	Key blank, ign. and door, original Hurd, 91A 3...
L03685, KB	Key blank, repro door/ignition
L03685,case	Key case, leather, orig type repro
L03686-A, 81A	Lock assy & 2 original Hurd keys
L03686-C, 06H	Cylinder and keys assy, steering & ign lock w/...
L03686-KB	Key blank, door/ignition, original Hurd
L03686, cvr	Replace door lock cover assy
L03686A-key	Key blank, hurd, door/ign
L03686C3	Key blank, trunk/ glove box, repro.
L03686KB	Key blank, original Hurd
L03695-A, 26H	Knob, steering and ignition lock, '42-'48 L
L03695, 5EH	Knob, steering and ignition lock, '46-'48 LC
L03701-B, 26H	Ignition lock cylinder clear plastic sleeve, '42-'...
L03704, B	Ignition switch body, '36-'3?
L03709	Ignition Switch slider, 1936-1941 LZ
L03712	Ign lock case, '36-? uses '32-'37 ford
L03712, B	ignition switch body, 2 terminal, '36-'41
L03735, 06H	Ignition switch button assy used with L03704 ...
L03785, 91A-H	Key, steering and ignition lock Drake Hurd im...
L04010-C, 96H	Columbia 2- speed rear axle housing assy only
L04010, 26H	Axle housing, right, '42-'48
L04011, 26H	Axle housing, left, '41-8
L04011, 96H	Housing assy, LH, '39-'40
L04012	Rear Axle Repair Sleeve (inner wheel brg race)
L04020, 26H L04020, 86H	Rear axle assembly, complete with brakes, dri...
L04020kit	Differential housing, pinion and bearing assy ...
L04020kit:L04616, 86H	Pinion bearings and seals, outer bearing-T315...
L04020kit:L04620, 86H	Pinion front bearing race
L04020kit:L04625, 86H	Pinion Front bearing
L04020kit:L04630, 86H	Pinion seal
L04027, HB	Pinion rear cone & roller assembly
L04028/29	Case and gear assembly, 39 teeth
L04030	Planetary pinions and shafts (3)
L04035	Transmission fill/drain plug
L04035-A, 86H	Differential Case Gasket Set
	Gasket, rear axle housingm .008- ,010' thick

L04035-B, 18	Rear axle differential housing gasket
L04035-B, 86H	Rear axle gasket-.004- .006' thick
L04035-C, 86H	Rear axle gasket
L04035, 18	Rear axle gasket-.015
L04035, 82	Seal, axle tube to differential
L04035set	Columbia Gasket set
L04055, HB	Sun gear - 15 teeth
L04066, HB	Gasket, vacuun cylinder base
L04069, HB	Packing, vacuum cylinder piston leather
L04073	Gasket, Vacuum Cylinder
L04076, HB	Valve assembly(vacuum)
L04077, 86H	Columbia two speed axle vavuum valve suppo...
L04078-A, 26H	Overdrive control cable, '41-42 LZ
L04078-A, 6H	Overdrive control cable, LZ '46-'48
L04078-B, 26H	Overdrive control cable, LC, '41-'42
L04078-B, 6H	Overdrive control cable, '46-'48 LC
L04078 brkt	Overdrive control bracket at dash
L04078, 56H	Overdrive control cable
L04081, 16H	Bracket, transmission overdrive control condui...
L04086-87, HB	Vacuum tube manifold connection
L04088, HB	Tube, engine to Columbia axle vacuum valve
L04091/91A	eight red rubber tube connectors and two vac...
L04104/4085, HB	Clevis and rod, vacuum valve control
L04112, HB	Columbia 2 speed axle 3/8" OD tubing clamp ...
L04120-B, 6H	Overdrive cable bracket at dashboard
L04205	Differential gear case
L04206	Case, differential gear, '36-'48
L04209, 86H	Lapped matched rear axle ring and pinion gea...
L04211, 86H	Differential spider, '36-'48
L04215, 06H	Pinion, differential spider

Item	Description
L04221, 68	Cone and roller assy, differential bearing
L04222, 68	Outer race, differential thrust bearing
L04235, 06H	Axle shaft, 1940, 16 tooth, 34 7/8" overall
L04235, 16H	Axle shaft, '41-8
L04235, 86H	Axle shaft '36-'39
L04243, H	Key, rear wheel hub to axle shaft
L04245	Drive shaft and inner axle seal
L04245-A, B	Rear axle shaft inner grease seal
L04245 axle housing tool	Axle housing seal installer (TOOL LOAN)
L04504, 16H	Torque tube assenbly, less center bearing, used
L04507, 48	Torque tube to differential gasket
L04513, B	Cap, universal joint inner liner, 36-'48
L04515/16kt	Universal joint seal kit
L04515/16kt:L04515, B	u joint gaskets, pr.
L04516	"U" joint cork seal
L04516-A2, H	Universal joint cork seal 5/16" x 5/16" x 12" (s...
L04520, 86H	Universal joint outer housing cap
L04545-A, B	Driveshaft front bearing cage and roller assy
L04605, 16H	Drive shaft assy., '41-'48
L04607,18	Pin, driveshaft coupling
L04616-21,86H	Differential pinion bearing kit: Outer brg timke...
L04616-B, BB	Pinion bearing race
L04616, 48	Pinion bearing cup (race)
L04621kit	Differential pinion bearing/seal kit:Outer brg T-...
L04621kit:L04686-A, 86H	Oil seal, pinion
L04621kit:L04686-spacer	Differential pinion seal spacer
L04621kit:timk31520	Differential outer bearing race
L04621kit:timk31583	timk31593
L04621kit:timk3821	Differential pinion inner brg race

L04621kit:timk3877	Differential pinion inner bearing
L04628, 86H	Pinion rear race
L04628, HB	Pinion inner race (T-3820)
L04634, 18	Pinion nut
L04634, 86H	Pinion nut
L04636, 01Y	Differential pinion nut retainer
L04637, 01Y	Differential pinion thrust washer
L04645-A, B	Drive shaft roller bearing, front
L04655-B, HB	Drive shaft front bearing race
L04658, 78	Driveshaft centerbearing assy
L04684-A, 86H	Driveshaft coupling, '38-'48
L04684, 86H	Drive shaft coupling
L04687-A, 86H	Pinion oil seal spacer ring
L04687A, 86H	Differential pinion seal spacer ring
L05020, 06H	Exhaust system, '40-'48 LC, mild steel
L05021, 96H	Cross member, frame, front spring, lower
L05034, HB	License bracket assy, front, '37-'41
L05037, B	License support, front, '36-'41
L05044, 96H	Insulator, frame/spring cross member, exchan...
L05055, 78C	Cylinder sleeve for 3 1/16" pistons
L05068-B, 06H	Bracket, rear brake conduit, RH
L05069-B, 06H	Bracket, rear brake conduit, LH
L05089-A, 06H	Transmission mount (oval design), 1940, exch...
L05089-A, 16H	Overdrive transmission support, '41-'48, EXC...
L05089-A, H	Transmission mount, '36
L05089-B, 06H	Transmission support, 1940-48 w/o overdrive
L05089, 96H	Rear engine/trans support, '38-9
L05105-B, 06H	Locking plate, rear engine support used with 0...
L05105, 16H	Lock plate (engine rear support bolt to cross ...
L05119, 06H	Locking plate, rear engine support bolts to fra...
L05119, 16H	Lock plate, rear engine mount-overdrive bolts
L05154, 91A	Battery support, '39 Ford Delux only
L05155-B, 06H	Battery hold-down bolt, cast bronze, dull zinc ...
L05155 Kit	Battery tray support kit
L05155fasteners	Captured nut & flat washer set for battery hold...
L05155fasteners:L05165-A,...	Battery hold-down, '36-'48
L05161, 26H	Exhaust pipe hanger assy, over axle and at ex...
L05175	Battery hold-down bolt, auth repro, bronze cas...
L05175, r	Battery hold-down bolt

Item	Description
L05191, 5EH	Muffler support, outlet Zephyr/Custom
L05200, 26H	Exhaust System, Stainless, '42 LZ
L05200, 96H	Exhaust system, '39LZ
L05200, H	Exhaust system, complete, aluminized, 1937 ...
L05202-16HA-SS	Exhaust system w/hot air htr, '41 LC cabriolit
L05202-30,06H	Exhaust system/w/hot water htr, '40-'48 LZ
L05202-A-s	Exhaust cross-over pipe, stainless
L05202-A, 96H	Exhaust cross-over pipe w/o hot air heater
L05214-A, 06H	Exhaust pipe, intermediate, LC Coupe, cabriol...
L05214-A, 86H	Exhaust pipe, intermediate, Zephyr/Lincoln '38...
L05216-B, 06H	Exhaust pipe, rear, '40-'48 LC, stainless
L05216-B, 26H	Exhaust tail pipe, LC
L05222, 86H	Exhaust cross-over pipe to manifold gasket
L05222, H	Gasket ex man to cross-over(2 rqd)
L05230-A, 06H	Muffler, 36-'48 LZ
L05230-B, 06H	Muffler, Lincoln Continental Cabriolet
L05230, 16H	Muffler, stainless, '46-'48
L05251, H	Clamp, Exhaust system
L05253-A, 26H	Bracket assy., exhaust pipe, rear
L05256, 06H	Bracket, tail pipe, center

L05259-B, HB	Exhaust pipe center support assembly
L05259, 11A	Exhaust system hanger insulator
L05259, 86H	Clamp, exhaust pipe front support at center cr...
I05261-b, 06H	Exhaust pipe hanger over axle and at rear, '40...
L05261, 26H	Bracket, muffler outlet pipe, rear, '40-8 LC
L05261, 26H:F05261, 99A	insulator part used to make 26H 5261
L05261, 26H:L05261, 26H ...	Clamp only part of 26H 5261
L05270, H	Clamp, exhaust pipe rear bracket
L05271, 06H	Exhaust pipe/muffler support, '40-'48 LC cab
L05271, 06H:L05261, 06H	Exhaust system hanger insulator
L05273-A, 26H	Exhaust pipe hanger, LC, rear
L05273-B, 06H	Support, muffler, front, '40-'41 LC Cabriolet
L05273-B, 86H	Support assy, exhaust pipe, rear
L05273, 5EH	Exhaust system support at muffler inlet
L05274-B, 06H	Bracket, frame to exhaust support over rear axle
L05274B, 06H	Exhaust hanger bracket
L05280, 06H	Bracket, frame to rear tailpipe support (26H-5...
L05291-A, 06H	Support assy, muffler outlet, original
L05291-A, 06H:L05241, 99A	Exhaust assembly, with clamp removed, is we...
L05291-A, 86H	Exhaust saddle support/insulator
L05291-B, 06H	Support, muffler, rear, '40-'41 LC canriolet
L05291, 26H	Exhaust muffler/tail pipe hanger
L05291, 5EH	Support, muffler tail pipe
L05292-A, rep	Support/insulator exh. pipe ctr. cross member
L05292-A, rep:L05292r-1	Vibration isolator
L05298, 06	Clamp/supports tailpipe
L05298, H	Clamp, tail pipe to frame bracket
L05310-A, 16H	Front spring, '41 LC
L05310-A, 86H	Spring, front, 13 leaf, '38-'39
L05310, 06H	Front spring & cover assembly, front, LZ Cp
L05310leaf	Front spring 2nd leaf
L05334, 16H	Spring clamp anti-squeak, 6" long, pr.
L05349, 16H	Spring clamp anti-squeek, 6"
L05350, 68	Nut used with lubricating type spring center bolt
L05455-A, 16H	Front spring clip ("U" bolt): Dimension "A" = 3....
L05455-D, 16H	Front spring clip, '46-8
L05463, HB	Stud assembly (strut rod & shackle), '37-'40
L05464, 16H	Spring Shackle Stud, '41-'48, ea.
L05464, 16H spacer	Spring shackle stud spacers to be used when ...
L05464, H	Spring shackle stud assy
L05464, HB	Spring eye bolt, '37-'40
L05466, HB	Bushing, front spring shackle
L05466, HB spacer	Spacers used to convert HB 5466 spring shac...
L05468, 51	Spring shackle bar, '37-9
L05468, 79	Spring shackle
L05470., HB	Spacer, spring shackle & strut rod stud
L05474-B, 06H	Bracket, frame to exhaust support (26H-5261)...
L05482-7	Stabilizer assy w/brackets

Item	Description
L05484, 06H	Stabilizer Bushings, 11/16' I.D. pr., '40-'41
L05484, 26H	stabilizer bushings, 3/4' I.D., pr. late '41-'48
L05486	Stabilizer bracket, LH, 1940-1948
L05486:L20349-S7	Hex head bolt, 3/8"-24 X 3/4"
L05487	Stabilizer bracket, RH
L05492, 06H	Link, front stabilizer, '40-8 & rear shock absor...
L05507 spreader loan	spring spreader
L05549, 16H	Rear spring anti-squeek pad, '41-'48, 2.5" x 6...
L05550, 68	Rear spring center bolt nut
L05560-A, 16H	Rear spring, 12 leaf 2600 lb
L05560-A, 26H	Rear spring, re-arched

L05599, 11A	Anti-squeek, front spring pad, 2" x 9" x 1/8", '3...
L05599, 59A	Spring anti-squeak, 1936-1940
L05622800/1-pin	Hinge pin
L05705-A, 16H	Rear spring clip (U" bolt). Dimension "A" =2.5...
L05705, 86H	Rear spring clip, 1938-1940, 2.88" wide, 5.14"...
L05711, HB	Rear spring clip for u bolts and strut rod
L05712, 68	Rear spring clip bar
L05713, HB	Spring shackle stud assy, 4.215' long, 1.12' O...
L05716, HB	Strut rod, rear, '37 LZ
L05722, HB	Bushing assy (rear spring shackle stud) fits int...
L05783-A, 96H	Rear axle overload bumper
L05783, B	Rear axle bumper, 2-ton
L05910-A, 86H	Stromberg carburetor, rebuilt, '38-9
L06008, 26H	Gasket set, engine overhaul
L06008, 8EL	Engine overhaul gasket set, '49-'51 Lincoln
L06010-A, 06H	Engine Block, cleaned and magnafluxed
L06010, 26H	Engine short block used not disassembled
L06014, 56H	56 H V-12 rebuilt engine, '47-'48 with cylinder ...
L06019-H	Timing gear cover
L06019, H	Cover, timing gears
L06020	Timing cover gasket
L06025-A, 18	Fuel pump push-rod bushing, '36-'37
L06025, 26H	Fuel pump push rod bushing
L06029, H	Front motor mount repair parts
L06038-A, 06H	Front Motor Mount, '38-'48 (exchange or add ...
L06038-A, 8EL	Engine support, '49
L06038-C, B	Engine support assy, front
L06038-core	Motor Mount Core
L06038-core1	front motor mount core
L06038-K, B	Motor mounts, pr, '36-7
L06039-A kit	Front motor mount rubber parts, '37 LZ kit
L06040/1	Water Pump Deflector Plates, pr.
L06040/1:L06040brass	Brass sheets for water pump deflectors
L06043-A, 18	Pipe plug, cylinder block oil line
L06043, 18	Engine oil plug
L06049-B, 06H	Cylinder head, Aluminum
L06049-C, 06H	Cylinder head, RH, aluminum, polished., '41-1...
L06049-c, 26H	Cylinder head, cast iron Zephyr script, '42 only
L06049-D, 06H	Cylinder head, finned, RH
L06049, 26H	Cylinder head, cast iron
L06049, H	Aluminum cylinder head, passenger side, '36-'37
L06049/50	Cast Iron Cyl Head, '42,pr
L06049/50-polished	New polished aluminum cylinder heads (pr.), '...
L06049/50,86H	Cylinder heads, aluminum, new, pair, 1938-19...
L06050-B, 06H	Cylinder head, aluminum
L06050-c-1,26	Cylinder head, cast iron, Zephyr, '42 only
L06050-C, 06H	Cylinder head, LH, aluminum, polished, '40-1 ...
L06050-D, 06H	Cylinder head, finned, LH
L06050, 26H	Cylinder head, cast Iron, LH
L06050, H	Cylinder head, aluminum, driver side, '36-'37
L06051	Head gasket, fibre
L06051-A, 26H	Gasket, Cylinder head, copper
L06056, 40	Valve seat
L06057-B, 40	Valve seat, exhaust, 1.6330' O.D.
L06062-cvr	Chrome cylinder head nut covers
L06062 chrome acorn	Chrome plated steel acorn cyl head nuts with ...
L06063	Cylinder head washer, cadmium

Item	Description
L06064	Cyl head nuts and washers, cadmium, set of 44
L06064-CHROME	

L06064, B	Cylinder head nut, cad plated
L06064:L351428-S7	Cylinder head washer, cadmium
L06064SS-acorn	ACORN SS HEAD NUTS, set of 44
L06064SS-acorn-polished	Acorn cylinder head nuts polished
L06065-ss	Cyl. head nut washers, stainless(44 req'd.)
L06065-SSN	S.S. Cyl Head Nut Set
L06065/6, 40	Cyl Hd stud set (44)
L06065/6, 40:L06065-B, 40	Cyl. head stud, 2.34'
L06065/6, 40:L06066, 40	Cyl. head stud, 2.90'
L06066-sealant	Head bolt and water jacket sealant item
L06066, B	Cylinder head stud 3 3/8"
L06067, 48	Cylinder head stud, 3.09"
L06067, 91A	Head Stud, 3.24 length with 1 7/8" fine thread...
L06072, HB	Oil filter inlet restricter, '37
L06073-A, 06H	Oil filter inlet 'T' fitting
L06108, 01T	Pistons, 3-1/16' 4 ring ford aluminum, with pin...
L06110-0, 06H	Pistons, set, Aluminum 3-ring 2 7/8' std
L06110-0, 26H	Piston set, aluminum 3-ring, 2 15/16' std.
L06110-0, 86H	Pistons, aluminum, set with wrist pins & retain...
L06110-0, 86H OEM	Pistons, Lincoln cast steel set of 12, 2 3/4 " St...
L06110-2, 06H	Pistons, set of 12. 2 7/8 +.020'
L06110-2, 26H	Pistons, aluminum, 2 15/16 + .020'
L06110-2, 86H	Pistons, set with pins & retainers, 2 3/4 + .020'
L06110-3, 06H	Piston set, 2 7/8 + .030, aluminum
L06110-3, 86H	Pistons, 2 3/4 + .030, set of 12 with pins/retai...
L06110-4, 06H	Pistons, set of 12, aluminum, w/pins & retaine...
L06110-4, 26H	Pistons, 2 15/16 + .040, aluminum
L06110-4, 86H	Pistons, 2 3/4 + .040' o/s
L06110-5, 06H	Pistons, aluminum, 2 7/8" + .060"
L06110-6, 06H	Piston set of 12, 2 7/8 +.060'
L06110-6, 86H	Piston set, with pins & retainers, 2 3/4 + .060"
L06110-B2, 06	Piston, NOS Lincoln cast steel
L06110, 06H-3	Pistons, set of 12, NOS steel, 2 7/8 + .030' o/s
L06110, 26H-3	Pistons, Aluminum, 2 15/16', +.040', set of 12
L06110, 26H-4	Pistons, NOS steel, 2 15/16 +.040 o/s, set
L06110, F	3 1/16 aluminum pistons
L06110,26H-5	Pistons,,NOS steel, 2 15/16' .005 u/s
L06110slv, 06	Cylinder sleeve 2.875 X 8.25 X 3/32'
L06111, 26H	Pistons, NOS Lincoln, 2/15/16 + .030
L06135-A, 06H	Piston pin, NOS, thin wall, '40-'41, '46-'48
L06135, H	Piston pin, thin wall, '36-'38
L06140, 78	Lincoln cast steel piston pin retainer
L06149--D, 96	Piston rings, '36-'39
L06149-3, 26H	Piston ring set 2 15/16' Hastings w/3pc oil con...
L06149-A, 06HS	Piston ring set (for 1 piston), NOS 2 7/8' STD
L06149-A, 26H std	Hastings 609 set 2 15/15" std
L06149-A2,96H	Piston rings, 2 3/4 std. w/ 3/16' oil ring
L06149-C2, 96H	Piston ring set, Hastings, 2-3/4" + .030"
L06149-D,96HS	Piston ring set, 2 3/4 +.020'
L06149-D,96HS:Has-15423	Top compression ring, 2 3/4 +.020
L06149-D,96HS:Has04175	Oil control ring, 2 3/4 +.020'
L06149-D,96HS:Has19924	Oil control spacer, 2 3/4 +.020'
L06149-D,96HS:Has38600	Second compression, 2 3/4 +.020'
L06149-E2, 96	Piston rings, 2 3/4 +.040' u/s
L06149, 01T	Piston ring set, 3 1/16' std
L06149, 06H-C	Piston rings, NOS Lincoln 2 7/8 +.030
L06149, 26H-2	Piston ring set, 2 15/16 + .020' O/S
L06149, 26H-3	Piston ring set, 2 15/16' +.030', Hastings, '42-'...
L06149, 26H-3:20468	Rails (24), 2 15/16 +.030'
L06149, 26H-3:33601	33601 Top ring 2 15/16 + .030'
L06149, 26H-3:33602	2nd (scraper ring)

Item	Description
L06149, 26H-3:42469	Spacer ring, 2 15/16 +.030'
L06149, 26H-4	Piston rings, Hastings, 2 15/16+.040' o/s
L06149,26H	Piston rings, 2 15/16' standard, Hastings
L06150, 06H-2	Piston rings, 2 7/8 + .020' set
L06150, 06H-3	Piston Rings, set Hastings, 2 7/8' +.030'
L06150,06H	Piston ring set, new Hastings, 2 7/8' std.
L06150,06H-4	Piston Ring set, Hastings, 2 7/8 +.040'
L06150,06H-6	Piston rings, Hastings, 2 7/8 +.060'
L06200, 26H	Connecting rod and piston pin bushing assy. r...
L06200, 26Hr	Connecting rod core
L06200, 86H	Connecting Rod 36-41, rebuilt
L06200, HB	Connecting rod, '37 only
L06207-A, 18	Bushing, Piston Pin bushing, seamless
L06207-A, 21A	Conn rod bushing, std
L06207, H	Piston pin bushing
L06211-0, 26H	Connecting rod bearing set, 2.25' std, '42-8
L06211-1, 26H	Connecting rod bearings,.010' u/s '42-'48, set ...
L06211-1, H	Connecting rod bearings, 1926-1941, set, .01...
L06211-2, 26H	Connecting rod bearings, '42-'48, .020' u/s
L06211-2, H	Connecting Rod Bearings, '36-'41 .020' u/s, s...
L06211-3, 26H	Connecting rod bearings, '42-'48, .030' u/s
L06211-3, H	Connecting rod bearings, '36-'41, .030' u/s
L06211-4, 26H	Connecting rod bearings, '42-'48, .040' u/s
L06211-6, 26H	Connecting rod bearing, '42-'48, .060' u/s
L06211, H	Connecting rod bearing set (12), '36-'41 Std.
L06211, H-4	Connecting rod bearings, '36-'41,.040' u/s
L06211, H std	Rod bearings, 2.125 std
L06211, H, .003" u/s	Connecting rod berings '36-'39 2.125 +.003
L06211, H.002	Connecting rod bearings NOS H 621-H (.002" ...
L06214	Connecting rod bolts
L06214, H	Connecting rod bolt
L06214, HB	Con rod Bolt, long
L06215	Con rod bolt-short
L06215, 86H	Rod bolt, short
L06215, H	Connecting rod bolt, short, 1936-37
L06215, HB	Connecting rod bolt, '36-'37
L06216, H	Rod bolt lock plates, set of 24
L06251, 06H	Camshaft, reground, w/ bolt on & oil pump dri...
L06251, grind	Camshaft Regrind
L06251,weld	Weld build-up cam lobe
L06254-A, 18	Oil pump drive gear, cam, round ID
L06254-B, 18	Oil pump drive gear, '46-'48 w/ 3/8' flat surface
L06256-A, 48	Cam gear, fibre, press-on
L06256-al,48	Timing gear, aluminum Press-on
L06256, 11A	Timing gear, camshaft, bolt-on-fibre
L06256, 91A	Timing gear, Alum., bolt-on
L06258, 91A	Cam timing gear lock plate
L06261-2 u/s	Cam bearing set, .020 u/s
L06261-3, .03	Cam bearing set, .030' u/s
L06261, 16H	Camshaft bearing set, std
L06262, 16H	intermediate cam bearing std
L06303	Crankshaft reconditioning
L06303-B H	
L06303-C, 26H	Crankshaft, cleaned, magnafluxed, ground, ca...
L06303-D, 26H	Crankshaft - .030 U/S with slinger removed for...
L06303-D, H	Crankshaft, reground .020' u/s
L06303, 56H	Crankshaft, forged, reground, seal mod
L06303, H	Crankshaft, used, '36-'41
L06303Machining	Recondition crankshaft

L06303Machining:Knurl	Knurl rear main journal to draw oil back into th...
L06303Machining:L06303k...	Knurl rear main seal surface
L06303Machining:L06303k...	Knurl crankshaft rear main bearing "wick" seal...
L06306, H	Timing gear, crankshaft
L06306, H:F06306. 48	Timing gear, crankshaft
L06307	Expansion plug, 1.126-1.144 inchdiameter
L06310, H	Oil slinger, crankshaft
L06312, H	Crankshaft pulley
L06317, H	Lock ring, crankshaft pulley
L06327, 96H	Rear main bearing cap
L06328, 40	Rear main bearing drain tube
L06329-B, H	Intermediate main bearing cap
L06330-B, H	Front main bearing cap
L06335, 86H	Oil seal, rear main bearing

Item	Description
L06335/6	Rear main bearing seal kit
L06335/6:L06335, 91A	Oil seal, rear main bearing, upper
L06335/6:L06336, 19B	Rear seal, lower
L06335/6:L06347, 91A	rear main bearing teflon/carbon seal kit
L06336, 96H	Rear main seal, lower (labarynth/slinger collec...
L06337-C, H-0	Main Bearing set, STD
L06337-C, H	Rear main bearing, standard
L06337-E, H	rear main bearing, NOS
L06337-k, H	Rear Main Bearing, .030"
L06337, H-3	Rear main bearing, resizable Cu/Pb, .030' u/s
L06337,H	Rear main bearing, .010' u/s
L06337,H-2	Rear main bearing, resizable, Cu/Pb, .020' u/s
L06337.010	Main Bearing set .010' u/s
L06337.020	Main bearing set, .020' u/s
L06337.030	Main bearing set, .030' o/s
L06337.040	Main Bearing Set, .040' u/s
L06337.060	Main bearing set, .060' u/s
L06338-.040 (E), H	Main bearing, front
L06338-60, H	Front main bearing, .060
L06342-E, H	.060 Front Main bearing resized to .040 to be ...
L06345, 48	Crankshaft main bearing stud
L06345, 68	Crankshaft Bearing Studs
L06347, 91A	Improved rear main bearingseal inserts (carbo...
L06348,	Main mearing cap castle nut
L06348, B	Main bearing cap slotted nut
L06360, H	Vibration damper assembly, '36-'48
L06364-B, 06H	Vibration damper flywheel, '40-'48
L06366, H	Vibration damper friction rings, Pr... (facing)
L06369, H	Vibration damper spring
L06375, H	Flywheel assy, '36-'41
L06384, B	Flywheel ring gear, '36-'48
L06398, 26H	Flywheel assy, '42-'47
L06398, 56H	Flexible flywheel assy with cut-away for 5EH ...
L06398flex	Flexible flywheel web spacer ring
L06445, 26H	Retainer assy, flexible flywheel
L06500-A, 91A	Valve lifter, solid, non-adjustable
L06500-adj	Valve lifter, solid adjustable
L06500-AJ	Valve lifter, hollow adjustable
L06500-WRN	Solid lifter wrenches, pr.
L06500, VGT	Valve guide removal tool
L06500T, A	Valve guide removal tool, 'dog leg'
L06500vgt	Valve guide removal tool
L06502 core	Valve lifter body, used, core
L06502, 86H	Valve lifter body, reconditioned
L06502,rcnd	Hydraulic lifter and lifter body reconditioning, ex...

L06502u	Hyd valve lifter body, used
L06505-A, 06H	Valve, original mushroom type, ex or intake
L06505-A, 11T	Valve, mushroom, ex & intake
L06505, 8BAkt	Straight-stem valve conversion assembly, set ...
L06505, 8BAkt:L06505, 8BA	Valves, 12, straight stem
L06505, 8BAkt:L06510, 8BA	Valve guide for straight stem valves, 12
L06505, 8BAkt:L06513, 86H	Valve Springs, 12
L06505, 8BAkt:L06514, 8BA	Valve spring retainers, 12, str stem valves
L06505, 8BAkt:L06518-S, 7...	Locks, 12 pairs, straight stem valve
L06505, 8BAkt:L06571, 8BA	Valve guide seals, 12, straight stem valves
L06508-r	New VL-975Hydraulic valve lifter
L06508-r, 26H	Hyd valve lifter, used, rebuilt
L06508 core	Used, rebuildable hudraulic lifter
L06508, 26H	Hydraulic valve lifter, NOS/VL-15
L06508, 8EL	Hydraulic Lifter, '49-51 Lincoln
L06508,86H-r	Hydraulic lifter, rebuilt
L06508repro	Reproduction lifters, imported (lower body dia...
L06508shim	Hydraulic lifter shims
L06510	Dog leg stubborn valve guide removal tool
L06510-B, 40	Valve guide, split, exhaust
L06510-D, 06H	Silencer & air purifier assy., '40-'41 LC
L06510-TB	Valve installation/removal tool
L06510-TOOL	Valve guide removal tool, long bar style

Item	Description
L06510, 40	Split Valve Guide
L06510C	Valve guide retainer removal tool, genuine KD
L06510TB	Valve guide installation tool
L06512, 06H	Valve guide horseshoe retainer, set of 24
L06513, 78	Valve spring, '32-'48 Ford
L06514, 40	Valve spring retainer
L06515, H	Stud, fuel pump adapter to manifold
L06517-C, 1BA	Rotocap valve spring retainer cone
L06519-3 carb	Inlet manifold, 3-carburetor
L06519-C, 16H	Inlet manifold, 3-bolt carburetor, polished, 194...
L06519-E, 26H	Manifold assy. inlet, '42-'48
L06519-F, 16H	Intake manifold and studs assy., '36-'41
L06519-F, 16H carb	Intake manifold, '36-'41 3-bolt square base
L06519, 2carb	Intake manifold, dual carb, Edmunds
L06519, 86H	Intake Manifold, 3-bolt early w/no vent tube
L06519, H	Intake manifold, '36-
L06519float ferrel	Intake float ferrel
L06519w	Intake Manifold thin Stainless washers (18)
L06521	Intake manifold gasket
L06524-A 86 H	Baffle assy., valve chamber, front (2 rqd)
L06524-B 86 H	Baffle assy., valve chamber, rear
L06526	Plug, manifold, front, '41-'48
L06526, 26H	Intake manifold vacuum plug, front
L06526, H	Distributor vacuum brake tube manifold fitting ...
L06527	Plug, intake manifold vacuum connection - w/...
L06527, H	Vacuum fitting intake manifold to w/s wipers
L06534-A, B3A	Rotocap valve spring retainer
L06534-A, B3A:L06514-C	Rotocap valve spring retainer "hat"
L06544-cap	Cap, hydraulic lifter by-pass chamber
L06544, 86H	Hydraulic lifters oil metering valve
L065608, 8EL	Hydraulic valve lifter, '49-'51 Lincoln
L06600-bolt	Mounting bolt w/safety wire
L06600, 86H/06H kit	Rebuilding kit for early V-12 pumps
L06600, 8BA	Melling M-19/8BA '80 lb.' oil pump
L06600, 8EL	8EL6600 '49-'51 oil pump
L06600, 8EL k	Adapter kit, 8EL pump

L06600, 8ELkt	Rebuild kit, 8EL 6600 pump
L06600, H/V	OIL pump, NEW High Volume w/pick-up asse...
L06600, kit	High volume oil pump conversion kit
L06600, kit:L06600, M-15	Oil pump, high volume, short body
L06600, kit:L06615 bolts	Oil pump pick-up mounting screws
L06600, kit:L06615, 8RT-Linc	Oil pick-up tube & cover
L06600, kit:L06615, 8RT-Li...	5/8"O.D. X 20 GA wall DOM D.O.M. mechanic...
L06600, kit:L06623-A, 41A	Oil pump screen
L06600, kit:L06628, 8BA	Oil pump screen retainer
L06600KT, 8EL	K-26 kit for 8EL-6600
L06612, B	Oil pump housing bushing
L06615, 41A	Oil pump pick-up, '47-'48 56H and 8EL pump
L06626, H	Gasket, oil pump screen cover, H-06H pumps
L06628, 8BA	Oil pump screen retaining Bail
L06643, 8EL	8EL oil pump "O" rings, Pr.
L06652, 18	Oil pump upper shaft gear
L06652, 8EL	8EL oil pump top gear with dist. drive shaft spl...
L06654	Oil relief valve ball and spring
L06654, 86Hkt	Oil relief valve assy at front end of block
L06655-A, 18	Oil pump idler gear with bushing
L06655-A, 18:L06655-bushi...	Bushing, oil pump drive idlergear.
L06656, 18	Oil pump idler gear pin
L06657, 18	Oil pump drive idler gear bushing
L06659, 86H	Idler gear cover gasket
L06664, 86H	Idler Gear Cover with shaft
L06666-B, 86H	Cap, tappet oil line by-pass, -.54' o/all height (...)
L06675-starter cap	56H oil pan starter drive cap
L06675, 96H	Oil pan, '39-'46
L06688, 56H	Oil pan tray, '46-8
L06688, 86H	Oil; pan tray, '38-'46
L06688, 86H mod	86H oil pan tray shortened to replace 56H tray
L06700	Crankshaft seal, front

Item	Description
L06700, rpl	Crankshaft front 360 degree lip seal
L06701, 96H	Oil pan cork packing, rear main bearing cap to...
L06710/11	oil pan gasket set
L06714, 06H	Oil filter cannister, less lines and fittings
L06714, HB	Oil filter canister, less pipes and fittings
L06716-A, 26H	Oil filter inlet pipe, '40-'48, with loop
L06716/18	Oil Filter Steel Lines
L06718-A, 86H	Pipe, oil filter outlet, to oil pan
L06718, 96H	Oilfilter outlet pipe, straight
L06721-A, HB	Oil filter outlet elbow fitting
L06722, 06H	Oil fitter union at block
L06723, HB	Tubing nut for 5/16" flaired steel oil filter line
L06730, B	Plug, oil pan drain
L06731, 01A	Oil filter cartridge,Original equipment Fram C-4
L06734-C, B	oil pan drain plug gasket
L06735-B, H	Oil level float assembly
L06737, 96H	Oil filter cover
L06737bolt	Oil filter bolt
L06740	Oil level guage scale
L06740, 26H	Guage, oil float rod indicator
L06742, HB	Oil level float indicator disc, aluminum or red p...
L06749	Oil filter cover screw copper washer
L06757, 16H	Overdrive output shaft seal, 16H-7657
L06765, 86H	Oil filler pipe, '38-'48
L06765, 86Hr	Oil filler pipe, new reproduction,'38-'48
L06766-B, 48	Oil filler cap/crankcase vent filter
L06774, 86H	Mud pan assy., RH,

L06774, 86Hr	Mud pan assy, RH, '38-'48
L06777, 86H	Mud pan assy., LH
L06781, 96H	Oil pan gasket set
L06814-A, 26H	Mud pan, clutch & brake pedals, '42-'48
L06814, 06H	Mud pan, brake/clutch pedals, 1938-41
L06903, 16H	Borg Warner overdrive assembly, used, rebuild...
L06903, 26H	Overdrive assy, '42-7
L06903, 56H	Transmission and overdrive assembly, 1947-1...
L06915-12 volt	Overdrive relay, 12 volt for engines w/o dual c...
L06915-A, 26H	Relay, transmission overdrive, late '41 and '42...
L06915-B, 26H	Overdrive relay, '46-'48 (exchange or add \$75 ...
L06915, 16H	Overdrive relay, '41-2
L06916-R/N	Overdrive solenoid, remanufactured with new ...
L06916, 16H	Overdrive Solenoid, rebuilt, exchange
L06917, 16H	Overdrive lock-out switch, '41-6
L06917, 56H	Overdrive lock-out switch, '47-'48
L06917, 56H gasket	lock-out switch gasket
L06918-A, 16H	Overdrive kick-down switch,, LZ '41-'48
L06918-B, 16H	Overdrive Kickdown switch, LC '41-'48
L06919, 16H	Governor, Overdrive
L06919, 16Hu	Overdrive governor, with drive gear, restored, ...
L06921	Transmission overdrive governor drive
L06922, 16H	Overdrive governor drive gear
L06931, 16H	Carpet grommet, overdrive kick down switch
L06932, 56H	Overdrive lock-out switch gasket
L06937-A, 8M	Overdrive governor switch
L07005-A, 26H	Transmission case & bushings assy., used wi...
L07005, 86H	Rebuilt '38-9 Transmission, complete
L07017-A, 26H	Gear, main drive, 19 teeth
L07017, 48	Main drive gear, '36-'37
L07025-A, B	Bearing, trans main drive gear w/snap ring
L07030-A to D, 29AS	Snap rings (trans.main shaft rear bearing from...
L07038, B	Universal Joint Seal Kit
L07040, B	Main drive gear, Bearing baffle
L07050, 51	Main drive gear retainer,
L07051, 78	Gasket, main drive gear brg retainer
L07052, 78	Oil seal, main drive gear bearing
L07061	Mainshaft 68 7061-B
L07061, 16Hu	Shaft, main - used with transmission overdrive...
L07061, 56H	Transmission overdrive Main Shaft
L07063, B	Mainshaft bearing retainer
L07064, B	Snap ring, main drive gear bearing to shaft, 1-...
L07065, 51A	Transmission main shaft ball bearing-snap rin...
L07065, B	Mainshaft ball bearing w/ snap ring
L07069-A/B, 81A	Spacer between 2nd gear and synchro (not us...
L07071, 81A	Washer, thrust, '38-'47, used with 81A & 16H-...
L07073, 81A	
L07079, 86H L07080, 68	Plate (trans. main shaft bearing retainer) '38-'... Main shaft bearing oil baffle
L07085, 86H	Trans main shaft bearing retainer
L07086-A, 26H	Gasket (transmission to overdrive case), '41-'47
L07086, 56H	Overdrive adapter gasket
L07086, 86H	Transmission main drive gear bearing retainer...
L07090, B	Universal Joint, new replacement
L07090, HB	Universal Joint, 1936-1948 Lincoln NOS w/ne...
L07094, 86H	Lock plate, Horse collar transmission bearing ...
L07095, B	Universal joint front knuckle retainer
L07100-B, 68	Low-reverse slider gear '36-9 repl. by 21C-710...
L07100, 01A	First/reverse sliding gear
L07100, 21C	Low-Reverse sliding gear, '39-'48
L07107	Synchronizer ring

L07107-B, 81A	Synchronizer ring
L07109-S, 51A	Synchronizer clip and spring set, 3 rectangula...
L07109-S, 81A	Synchro small parts kit, 3 springs and 3 1/4" b...
L07111, B	Countershaft
L07112rep	8A-7112-kit, cluster gear pack 1936-37LZ
L07113, 26H	Gear, countershaft, 25 teeth on driver
L07113, 68	Cluster gear, '36-'39, 28 tooth
L07113,06Hset	Transmission good used gear set, 26 tooth cl...
L07113set	Zephyr gear set, 06H 7113 26 tooth cluster, 5...
L07113set:L07017,56H	Gear, main drive, 18 teeth, '47-'48
L07113set:L07102, 06H	Gear Assembly, intermediate, '40-'48
L07113set:L07113, 06H	Cluster gear, 26 teeth on driver
L07115, B	Cluster shaft bearing seperator
L07116-B, 81A	Syncro hub insert, 81A 7116-B
L07118, B	needle bearing
L07119-A, B	Thrust washer, countershaft front, 2 1/2' O.D.
L07121, B	Needle roller bearing
L07124, 8M	Synchronizer assy. '40-'56
L07129-B, 68	Thrust washer, cluster gear. Single
L07129, 26H	Thrust washer, countershaft rear, used with o...
L07129, 26H:L07128, 8M	Cluster washer, '40-'48
L07129, 26H:L07129, 8M	cluster gear thrust washer
L07130, AOA	Cluster Thrust washer set
L07140-A, B	Shaft, reverse idler
L07141, 68	Gear & bushing, reverse idler
L07153, B	Transmission gasket set
L07155, 16H	Pin, countershaft and reverse idler shaft retain...
L07186, 16H	Transmission rear bearing retainer gasket
L07201, 56H	Shift cover, levers, cam and shafts assembly
L07202, 5EH	Gear shift lever
L07208, 01A	Shift lever spring
L07209-A, 6H	Gear shift shaft, LZ
L07209-B, 6H	Gear shift assy
L07209-D, 06H	Gear shift shaft, 1940 LZ
L07213, 5EH	Gear shift ball, '41, '46-'48
L07213, 96H	Gear shift ball, '36-'39, new reproduction
L07221, 01A	Trans. shift arm pin, 01A-7221
L07222, 16H	Transmission side cover, '40-'47
L07222, 56H	Transmission side shift cover assembly, '47-'48
L07223	Transmission Gasket Set
L07223set, 86	Transmission Gasket set, '38-'39
L07227, 06H	gear shift retracting spring, 41-8
L07227,06H	Gear shift retractinh spring
L07230, 91A	Fork, high & intermediate
L07231-C, 68	Fork, low & reverse
L07234, 01A	Spring, transmission mesh lock
L07246, 01A	gear shift boot
L07288, 01A	Seal, gear shifter arm bearing
L07302, 06H	Gear shift arm assembly, transmission high & ...
L07303, 06H	Gear shift arm assembly, transmission low & r...
L07314, 01A	Cup, gear shift bracket felt retainer
L07317-A, 16H	Bracket assy. gear shift bearing on steering c...
L07323	Felt gear shift bracket
L07325-B, 06H	Gear shift rod, 2nd/high (adjustable)
L07327-B, 06H	Low-reverse shift rod (non-adjustable)
L07353, 06H	Adjusting sleeve, high/intermediate gear shift r...
L07354-RK, 01A	Shifting linkage repair kit, 12 piece set
L07375, 06H	Transmission gear shift brake, rotary
L07488, 06H	gear shift retracting spring cap
L07503, 26H	Shaft assy, clutch pedal extention lever, '42-'48
L07508-A, B	Brake pedal bushing,'38-'41, 7/8" I.D. longgra...

L07508, 01A	Clutch release shaft bushing
L07508, 26H	Roller bearing, clutch pedal shaft-to transmiss...
L07508, 51A	Clutch shaft bushing, '47-'48
L07510, B	Clutch shaft
L07511-A, 96H	Clutch release shaft lever, 1938-1939
L07511-B, 5EH	Clutch release shaft lever
L07514, 86H	Clutch pedal bracket and bushing assy
L07515, 5EH	Clutch release shaft fork, '36-'48
L07518, 48	Clutch inspection hole cover
L07520, 06H	Clutch pedal, '40-8
L07521, 06H	Rod, clutch pedal to release arm
L07523-B, 06H	Clutch retracting spring, '40-'48
L07527-A see L02476	Clutch & brake pedal weather seal
L07533-B, B	Pin, (special head clevis) -5/16" x 1-7/16"
L07545, 06H	Spring, clutch pedal lever shaft
L07550-T	Clutch disc alignment tool
L07550, 29A	New Precision Clutch Disc (no core charge)
L07550, 6H	Clutch disc,original Lincoln 8-spring, rebuilt, e...
L07550/63	Clutch Disc and pressure plate, new replacem...
L07550tool	Clutch disc centering tool
L07560, 06H	Washer, clutch pdal extension shaft felt, .75' l....
L07561, 48	Hub, clutch release bearing
L07562, 48	Clutch throw-out bearing collar return spring
L07563, 19A	Pressure plate (no core charge)
L07563, 19A:L350433-S	Screw, pressure plate, special hex hd 5/16-18...
L07563, 56H	Clutch pressure plate OEM reconditioned, ex...
L07576, 06H	Spring, clutch pedal shaft anti-rattle
L07580	Throw-out/pilot Brgs
L07580-A, 78	Clutch release bearing
L07600, B	Clutch pilot bearing
L07609, B	Retainer, flywheel dowel
L07616-B, 86H	Turnbuckle, clutch pedal to release arm
L07650, 16H	Overdrive case, 1941
L07650, 26H	Overdrive case
L07650, 56H	Overdrive case
L07652, 16H	Overdrive main shaft assembly
L07652, 16Hu	Overdrive main shaft, used
L07653, 16H	Overdrive main gear
L07657, 16H	Overdrive output shaft seal
L07658, 16H	Spacer, overdrive main shaft seal
L07659, 16H	OVERDRIVE ADAPTER 16 H or 26H
L07659, 56H	Overdrive adaptor
L07661, 16H	Overdrive adapter gasket, .015' thick
L07662, 16H	Overdrive balk ring and gear plate assy.
L07662, 56H	Balk ring assembly
L07665, 26H	Plate, overdrive balk ring & gear plateassy co...
L07665, 56H	Plate & trough assy
L07666-A, 16H	snap ring, overdrive balk ring & gear plateass...
L07667-A-D, 16H	Snap ring, transmission main shaft rear, .087"...
L07668, 16H	Baffle, oil, transmission main shaft
L07670, 16H	Sun gear, overdrive, '41-'46
L07670, 56H	Sun gear, 56H overdrive only, '47-'48
L07673, 16 H-U	Planetary gear cage assembly -good used part
L07673, 16H	Cage assembly, transmission overdrive, '41-'46
L07673, 56H	Overdrive planetary gear assy, '47-'48
L07674, 16H	Retainer, free wheel cage.
L07675, 16H	Cam, roller and cage assy, overdrive free whe...
L07675, 16H:L07679, 16H	Rollers, set of 12, overdrive free wheel
L07676, 16H	Overdrive free-wheel cam retaining clip
L07680, 16H	Fork & rail assy (transmission overdrive shift, ...
L07680, 56H	Overdrive shift rail & fork

L07685, 16H	Spring (trans overdrive shift fork & rail assy. re...
L07686, 16H	Overdrive control cable
L07688	Oil seal, Transmission overdrive control shaft,...
L07688, 16H	Oil seal, overdrive control shaft, '41-'47; 45/64...
L07688, 56H	Oil seal, overdrive control shaft 15/16' O.D. -
L07689, 56H	Overdrive control lever
L07690, 16H	Pawl, (transmission overdrive stationary gear)
L07693, 26H	Oil seal, overdrive pawl operating rod(solenoid...
L07697, 16H	Bearing, overdrive main shaft, rear#206
L07698, 16H	Overdrive main shaft front bearing 16H-7698
L07814-A, 78	Brake hose/cable retaining clip
L07925spring	Accelerator cross shaft anti-rattle spring
L08005-A, 26H	Radiator, good used
L08005-C, 06H	Radiator, assy
L08005, 26H	Radiator, used, '42-8
L08005, in/ou	Radiator inlet/outlet
L08005,06core	radiator core
L08052, 26H	Radiator support (on frame)
L08100-A, 86H	Radiator cap, special equipment, '38-'41
L08100-B, 26H	Radiator cap, '42-'48
L08100-RK	radiator cap repair kit
L08100-RK, B	Radiator cap repair kit for 1938-1941 caps
L08100, HB	Radiator cap, '37
L08100, 91A	Radiator cap, non-pressurized, '38-'41
L08100, HB	Radiator cap, 1937
L08115-A, 40	Coolant drain petcock, block, original
L08115-A, 8CM	Radiator drain cock, replacement
L08115, 48	Drain cock, radiator, '38-'48
L08115,48	Drain cock, radiator, original type
L08150, 06H	Radiator grill, 'R.H., '40
L08150, 26H	Radiator grill, lower right, '42
L08150, 5EH	Radiator grill, '42-8. upper right
L08150/1, 16H	Grills, used, pair
L08150/51, 86H	'38 grills,used, pr.
L08151, 26H	Radiator grill, lower left, '42
L08151, 5EH	Grill, upper left, '46-'48.
L08159/51, 86H	'38 LZ used grills, pr.
L08168-A, 06 H	Center grill strip, '40-'41
L08168, 06H	Radiator grill center moulding, '40-'41LC/Cust...
L08168, 16H	Center grill strip, '41
L08168, 26H	Center grill, 1942
L08168, H	Center grill strip, '36-'37, reproduction
L08184, 26 H	Grill lower whisker, RH
L08204, 26H	Radiator grill, upper right, '42
L08204, 5EH	Radiator grill, lower right, '46-8
L08205, 26H	Radiator grill, upper left, '42
L08205, 5EH	Radiator grill, lower, left, '46-8
L08206-A, 5EH	Radiator grill, fog lamp housing, RH
L08207-A, 5EH	Radiator grill, fog lamp housing, LH
L08241, 5EH	Grill upper center
L08251, 5EH	Radiator grill, upper left, '46-8
L08260, 06H	Radiator hoses, upper, pr. 06H script w/o sign...
L08260, 06H w/o signode	Upper radiator hoses, '40-'48, logo w/o signod...
L08260, 06H:L08260	radiator hose upper, plain, '38-'48, pair
L08260, 06Hpr	Upper radiator hoses, pair w/signode clamp
L08260, 06set	Radiator hoses, 06H, '40-'48, 4 pc. set
L08260, 86H	Radiator hoses, upper and lower, 4 piece set, '...
L08260, 86H (UPPER)	Upper radiator hoses, pr, authentic reproducti...
L08260,06Hw/s	Radiator hoses, upper, pr. w/signode
L08286, H	Radiator hose, '36-'37 & '38-'48 lower
L08286, H:Day 76175	Dayco 1 3/4' radiator hose

Item	Description
L08287, 91A	Radiator and fuel filler hose clamp, new origin...
L08287, 91A:L08287, 91A-...	Surplus hose clamps needing clean/plate
L08303, 26H	Radiator Air Deflector panel, top, '42-8
L08355, 5EH	Radiator grill lower center, '46-8
L08501, 06H	Water Pump, RH, Remanufactured, (EXCHA...
L08501, 96H	Water pump, RH 1936-1939 rebuilt with the la...
L08501/2 oiler	Waterpump oil tube
L08501/2core	Water pump core charge (refundable upon rec...
L08502-htr	water pump heater fitting
L08502, 06H-special	LH water pump modified with modern seals a...
L08502, 06H, exchange	Water Pump, L.H., with hot water heater retur...
L08502, 06H, w/o htr	Water pump, LH, 1940-1948, rebuilt, exchang...
L08502, 96H	Water pump, exchange, LH '36-'39 rebuilt with...
L08506 06H	Thermostat, NOS, 06 H
L08507, H	Water pump gasket
L08509, H	Pulley, Water pump
L08511, 06H machined	Water pump shaft
L08512-A, 06H	Waterpump impeller, '40-'48
L08520, H	waterpump oilite bushing
L08524	Water pump rear seal, CR 5606
L08530, H	Bearing, water pump shaft
L08536	Water pump outer bearing spacer
L08542	Water pump front seal CR 5707
L08557, 06H	Water pump carbon, 4 tab type seal (1940-19...
L08559	Waterpump packing cage
L08560	Waterpump packing spring
L08575-B, 11A	Thermostat, Ford
L08575, 06H	Thermostat, Original new old stock
L08575,06#5	Thermostat, type#5
L08575r	Thermostat, reproduction, '36-'48, 160 degree...
L08575r/prestone	Thermostat, Low temperature reproduction, in...
L08575r:L08575-A, 11A	160 degree Ford thermostat
L08575r:L08575-A, 1BA	160 degree thermostat, '49-'53
L08575r:L08575-C, 11A	Thermostat, '37-'48 Ford
L08600, 6Volt	Auxilliary 6 volt cooling fan kit
L08600, 78	Fan assembly, generator pulley mounted
L08600, 96H	Fan assy., '36-'48
L08601, 06H	Fan drive & vibration damper
L08601, 26H	Vibration damper assy, '42-'48
L08620-A, Hr	Fan belt, '36-'38, reproduction with script
L08620-A, Hr:L08629, Hr	Fan belt, 1936- 1938 and 1940 LC new mfg. ...
L08620, 96H	Fan Belt, '39-'48, Show quality with visible lam...
L08620,96HNOS	Fan belt new old stock
L08620,96Hrep	Fan Belt, orriginal style repro w/script & part #
L09002	Fuel tank, '41-'48
L09002-A, H	Fuel tank, '1936-1939
L09002-A, H (68-9002)	Fuel tank, reproduction
L09002, 06H	Fuel tank, 1940
L09002, 86H	Fuel tank, '36-'38 Can use Drake Ford repro #...
L09030-B, 51	Oil filler/ fuel tank cap, '36-'37
L09030, 11A	Cap, fuel tank, '40-'48
L09030, 11C	Fuel tank cap, '36-'39 LZ
L09030, 18	Fuel tank cap, plain, with knurled edge
L09034, 26H	Filler assy., fuel tank
L09034, H	Gas tank filler neck
L09047, 78	Fuel tank filler hose
L09051, 46	Lead washer for sealing'36-'39
L09066	Fuel tank front hanger
L09080-A, H	Gas tank filler rubber grommet, '36-'39

L09080, 91A	Radiator cap repair kit '
L09158, A	Fuel pump sediment bowl
L09173	fuel pump sediment bowl gasket
L09202, 01A	
L09273-A, 06H	Oil pressure guage, '40LZ
L09273-C, 5EH	Indicator assembly, oil pressure, gold letters a...
L09273 86H	Oil pressure guage
L09275-A, 21C	Fuel tank sending unit, original type
L09275, 99A	Fuel gage tank sending unit, reproduction
L09275float	Fuel tank sending unit brass float

Item	Description
L09276	Fuel tank sender gasket
L09276, 68	Fuel tank float assy. cork gasket
L09278-NOS	Oil pressure sending unit, 50 #, NOS
L09278, 48	Oil pressure sending unit, 50#, rebuilt
L09278, 8BA	Oil pressure sending unit, 80 lb guage
L09278, 8BA-recal	Oil pressure sending unit, 80 lb converted to a...
L09280-C, 5EH	Fuel guage, gold letters and numerals, '47-8
L09280, 5EH	Instrument cluster
L09282	Fuel line from tank, copper plated steel, with fi...
L09282, 06H	Fuel line repair, 4'
L09288-A, 18	Flex fuel line to fuel pump
L09296, 18	Fuel line to firewall bracket near flex fuel line
L09299, 06H	Fuel Tank anti-squeek
L09326	Exhaust manifold, left
L09349, 11A	Fuel pump rebuilding kit
L09349, B	Fuel pump, '36-'41
L09350 ELP	6 volt correct pressure fuel pump
L09350, 59A	Fuel pump, glass bowl, '42-'48
L09350, 68	Fuel Pump, '37-'40
L09350, elec.	Fuel pump, in-line electronic, 6 volt
L09350, elec. 12 V	Fuel pump, in-line, electronic, 12 volt
L09357	Fuel pump top screw washer (gasket)
L09364	Fuel pump filter bowl gasket
L09365, 11A	Fuel pump screen for '36-'41 pumps
L09369	Fuel line, Cu on steel, pump to carburetor
L09369, 86H	Fuel line pump to carburetor, '38-'39
L09369,2-carb	Fuel line, Dual Carburetor interconnection
L09374, 48	Gasket, fuel pump adapter to manifold
L09398, 68	Fuel pump diaphragm
L09400-A, 26H	Fuel pump push rod, '38-'48
L09400-A, 48	Fuel pump push rod, '36-'37
L09415, 86H	Fuel pump adapter, '36-'48
L09417	Gasket, fuel pump to adapter
L09428-B, 96H	Exhaust manifold, used
L09428-B, HB	Exhaust manifold, R/H
L09428/29	Exhaust headers
L09428/9ctg	Clean/derust/metal-ceramic coat exh. manifolds
L09429, 96H	Exhaust manifold, L/H
L09447-A, 40	Gasket, carburetor to intake manifold insulator
L09448, H	Exhaust Manifold gasket set
L09449-spring	Exhaust valve thermal spring similar to 1GA 9...
L09460-A, 16H	Exhaust heat riser valve, '40-'41
L09460, 96H	Exhaust thermostat
L09510-A1,86H	Carburetor, Bendix-stromberg (exchange pric...
L09510-A2,86H	Carburetor, restored, holly, '38-'39 (exchange ...
L09510-B, 06H	Carburetor, 3 bolt Lincoln Zephyr script withou...
L09510-B, 16H	Carburetor, 3-bolt, w/distributor vacuum port a...
L09510-C, 26H	Carburetor, manual choke, remanufactured,'4...
L09510-D, 5EH	Carburetor, re-manufactured, EXCHANGE or ...

L09510, 96H	Carburetor, Holley, 1939 LZ, exchange, or ad...
L09510k-ee22	Lincoln '33-K EE-22 Stromberg, bowl
L09519-A1, H	Carburetor, Bendix-Strombergrebuilt (exchan...
L09524-A, 86H	Valve chamber baffle
L09533-B, 8EL	Carburetor main Jets, pr .053' '42 10,000-150...
L09533-C, 8EL	Carburetor main jets, '42 at 15,000' - up
L09533, 06H	Carburetor main jet - .054' hole
L09533, 86H	Carburetor main jets, .052'
L09535, 96H	Accelerator pedal assembly, '38-'40
L09550, 78	Carburetor float
L09550Z	Float, model A carb
L09585-B, 56H	Exhaust heat riser valve, '46-'48
L09590-g	Gasket, 3-bolt carburetor to manifold
L09590, 59A	Carburetor repair kit, holley, '38-'48
L09590, 67kit	Carburetor Rebuilding Kit, Stromberg, 1936-1...
L09590, 86H	Carburetor Rebuilding Kit, 1936-39
L09590, 8CM	Carburetor kit, '50-1 Linc & F-8
L09600-A, 26H	Air purifier assy, oil bath type, '42-'48 LZ
L09600-B, 16H	Silencer and air purifier assy, '40-'41 LC

Item	Description
L09600-CK, 78	Air cleaner element
L09600-D, 06H	Silencer and air purifier assy. '40-'41 LC
L09600-D, 06H:L09600-D, ...	New filter element for LC non oil bath air clean...
L09600-E,, 06H	Air purifier, optional oil bath type
L09600-E,, 06H Filter	Carburetor air cleaner new filter element LZ only
L09600, 86H	Air cleaner, oil bath, '38
L09600, H	Carburetor air cleaner/silencer
L09600, vent pipe	Vent pipe, intake to air cleaner (specify model...
L09603	Carburetor gasket, 4-bolt
L09603, 26H	Carburetor insulator, 4-bolt, '42-'48
L09603, H	Spacer, carburetor, -3 stud holes, 1/2' thick
L09614, 78	Throttle lever collar
L09620, 26 H	Air cleaner elbow, 1942-1948 LC
L09624, 78	Throttle lever spring
L09625-A, 26H	Oil Bath silencer and air purifiers '42-'48 LZ fa...
L09625-B, 26H	Air Cleaner assy. '42-'48 LC
L09625-B, 26H can	Air cleaner cannister assy only
L09625-B, 26H:L09625-B-c...	Cerb-A/C cast tube assy
L09625-C, 06H	Air purifier assy, oil bath, special equipment, '...
L09625-E, 06H	Silencer and air purifier, ;40-'41 LZ
L09628-B, 26H	Clamp assy, carb. air cleaner '42-'48 LZ
L09659-B, 26H	Tube, air cleaner-manifold crankcase vent, '42...
L09659, 06H	Tube, air cleaner to manifold, '40-'41
L09659, 86H	Tube, air cleaner to intake manifold, '36-'41
L096600-LV, H	Air cleaner - hot rod
L09663, 26 H	Bracket, support, cyl head to air cleaner
L09685-B, 56H	Exhaust heat riser valve, '46-'48
L09685-B, 56H:L09685-flap	heat riser flap valve
L09685-B, 56H:L09685-flng	Heat riser flange
L09685-B, 56H:L09685cstgs	Heat riser castings
L09685cstg	Exhaust valve castings
L09700/75-S	Choke rod
L09700cnt	Carburetor linkage connector
L09702, 91A	Choke and throttle rod joints
L09705	Dual carburetor linkage
L09705-A, 06H	Choke & throttle linkage, '40-'41 LZ
L09705-A, 16H	rod assy, automatic choke, '41 LZ & custom
L09705-B, 06H	Choke and throttle linkage, 1940-41 LC
L09705-B, 26H	Rod assembly, choke, '40-'48 LC w/o automat...
L09705, 96H	Choke control (I need the old one for measure...

L09705, HB	Control assy., hand choke
L09705/79-B, 26H	Choke & throttle Linkage, '42-'48 LC
L09714-A, 91A	Choke/throttle linkage socket rubber insulator ...
L09719, 91A	Choke and throttle dash board grommets and ...
L09723	Choke/throttle knob shafts
L09725-anti rattle spring	Accelerator cross shaft anti-rattle spring
L09725-spring`	Accelerator cross shaft spring
L09725, 06H	Shaft and bracket assy (bell crank), '40-'48 LC
L09727-A, 06H	Rod assy., accel pedal to cross-shaft, 11-5/8' ...
L09727-A, 06X	Accelerator linkage, dual carb set-up
L09727-B, 06H	Rod assy., accelerator pedal to cross shaft, '4...
L09727-B, 86H	Rod assy., accelerator pedal to cross shaft, 1...
L09727, 26H	Rod, accelerator pedal to cross shaft, 12 53/6...
L09728, 86H	Accelerator cross-shaft
L09735-A, 26H	Accelerator pedal, re-moulded, exchange
L09735 covr	Accelerator pedal cover. '41-8
L09735, 06H	Accelerator pedal, remoulded, '40, exchange
L09735, 21A	Accelerator pedal, '36-'37
L09735, 26H	Accelerator pedal, remoulded, exchange
L09735, 48	Accelerator pedal
L09735, 86H	Accelerator pedal assembly
L09735, 86H-cvr	Accelerator pedal cover, '38-'40
L09737, 06H	Spring, accelerator shaft anti-rattle
L09747, 86H	Throttle linkage, cross arm to carb, 13 7/8'
L09747Edmonds	Dual carb linkage, offenhauser
L097723/87	Choke and throttle control shafts
L09775, 96H	Throttle control, '39
L09775, HB	Control Assembly, carburetor throttle

Item	Description
L09776-A, 06H	Accelerator pedal dust shield
L09776, H	Accelerator rod bellows
L09779-A, 6H	Hand throttle rod assembly, '42-'48 LZ
L09779-B, 06H	Throttle control rod assy
L09779-B, 26H	Throttle rod, '42-'48 LC
L09780, H	Generator pulley cover
L09817, 86H	Accelerator retracting spring
L09904, 78	Economizer Valve
L09924	Carburetor main jet, pr
L09924.048'	Carburetor jet for dual carb manifold, pr.
L10000-ALT	6-volt alternator
L10000-B, 01A	Generator, two brush,'40-1
L10000-B, 81A	Generator, rebuilt, exchange
L10000-C, 5EH	Generator assy., '47-8
L10000, 21A	Generator, '42-'46
L10000, 86Hcover	86H generator pulley cover
L10000, 91A	Generator, '39 LZ only
L10000ALT	Alternator conversion of 6 volt generator
L10005-C	Generator armature for 81A10000-D & 91A10...
L10005, 7EH	Armature, '47-'48
L10043, 01A	Generator brush set
L10050, 01A	
L10057, 91A	Generator brush spring
L10069, 01A	Generator brushes
L10094, 7RA	Generator front bearing
L10096-B, 01A	Generator pulley lock ring
L10128, 78	Generator end plate bushing
L10130-B, 01A	Pulley, generator, cast, 3" diameter
L10139-ALT	Alternator mounting bracket
L10141-B, H	Water pump oiler tube, 3/8'
L10142, 18	Starter and Generator cover band

L10175-A, 7RA	Generator field coil for '47-'48 Lincoln
L10208, 81A	
L102a	Oil filter cannister assy with brass fittings
L1038-8.030	Piston set, '55 Linc 341
L103a	Battery, '40-'42, with raised LZ script, 140 A. H.
L103a-core	Core charge, group 2HF or 2HL
L103a:L103a-1	Battery strap, LZ embossing die
L103b	Battery, 'LINCOLN' 140 A.H., '46-8
L10505-A, 5EH	Voltage regulator, '47-'48
L10505-C, 01A	Voltage regulator, original, '41-'47
L10505-C, rpl	Voltage regulator, '38-'47, replacement type
L10505-MT, 01A	Voltage regulator terminal screw kit
L10505, 5EHrpl	50 amp regulator adjusted for 40 amp current ...
L10505, 68	Generator cut-out, '37-'38
L10505, 68trs	Generator cut-out assy electronic voltage regu...
L10505F, A	Generator cut-oui (not an original voltage regu...
L10610, 91A	Voltage regulator mounting grommets, set of 3
L10655-A, 01A	Ford script 2HF battery, gold oval, 170AH
L10655-A, 06H	Original Ford battery display case with "Lincol...
L10655-A, 26H	Battery, 'LINCOLN', '46-'48 OEM Richardson ...
L10655-A, 86H	Battery, LZ script 63 plates '40-'48, repro. incl...
L10655-B,26H	Battery 'LINCOLN', '46-'48
L10655 06H	Battery, LZ script, 170 A.H., '40-'42
L10655, 06 op	Battery, new 2H LZ script case, '40-'42 desig...
L10655, 86Hop	Battery, Lincoln Zephy script, OPTIMA, '36-9
L10655, logo	LZ raised tear drop battery logo
L10655, SW	Battery Switch
L10655top	Battery false top
L10682	Battery terminal corrosion arrester
L10718-b	Battery hold-down bolt, cast bronze, lead coated
L10718, 51A	Battery hold-down
L10850-A, 5EH	Ammeter, '46
L10850-B,16H	Ammeter
L10850-C, 5EH	Ammeter, '47-8
L10851-B, 06H	Speedometer assy, '40 LC
L10851-C, 06H	Instrument cluster, '40 LC
L10863-A,06H	bezzel, instrument cluster
L10883-C, 5EH	Temperature indicator assy. gold letters, '47-'48
L10884, 8A	Temperature sending unit, replacement using ...
L10884, 99A	Temperature sending unit, original
L10884, H	
L10893, 5EH	Temperature guage
L10897, 5EH	Inst cluser
L11002-N6, 18	Starter, new with modern bendix (no exchang...
L11002-R, 7RA	Starter, '36-'47, rebuilt, exchange
L11002, 18	Starter, rebuilt exchange
L11002, 5EH	Starter, High torque, '47-'48
L11002core	Starter core charge
L11049, 1B	Starter end plate
L11052, 18	Starter front end plate bushing
L11057, 18	Starter brush set
L11059, B	Starter brush spring
L11091, 18	Starter through-bolt (hex) 5/16-18 X 7.5' overa...
L11102-B-rep	Starter terminal repair kit
L11130, B	Starter end plate, drive end
L11135, 19B	Bushing, starter rear end plate, '47-8
L11135, B	Starter rear end plate bushing
L11140, 51A	Starter to pan bolt bracket
L112280-B,86H	Ignition wire conduits, pr. '38-'40 (w/o wires)
L11350, 5EH	Starter drive assy, '47-'48
L11350, B	Starter drive assy, '36-'47

L11375, 52	Starter drive spring, '47-'48
L11377, B	Starter drive screw .863'
L11379, B	Sarter drive lockwasher
L11382, B	Starter drive spring screw
L11401, 96H	Cowl wiring harness, '39
L11450-FS, 01A	Ford scripted solenoid
L11450, 21A	Starter Solenoid
L11500-C, 6A	Starter button
L11500, 6A	Starter push button switch
L11500, 6H	Starter push button switch, original
L11500, 6Hrpl	Starter Button, replacement
L11572-B-sleeve, 5EH	Ignition lock plastic sleeve
L11572-B, 5EH	Ignition lock assy, keyed to customer key
L11624	Circuit breaker
L11624-A,16H	Circuit breaker & resistor assy
L11624. 16H	Circuit Breaker (1) and resistor (2) assy
L11624. 16H:L012250, 11A	Circuit breaker and resistor Assy
L11652, 11A	Headlight switch, '41-'48
L11654, 06H	Headlight switch, 1940
L11654, 11A	Headlight switch, '41-'48 (new replacement for...
L11661-A, 06H	Headlight Switch, '39-'40
L11662-A,16H	Nut, headlight switch
L116a1	Heater/defroster air inlet valve, hot water
L117b1	Accelerator pedal cover
L12011, H	Ignition Coil Brushes, pr.
L12024, core	Rebuildable ignition coil core
L12024, H-r	Ignition Coil, rebuilt,(exchange, or add \$75 cor...
L12024adaptor	Adaptor to replace stock coil (FOR USE WIT...
L12024adaptor:L12029-B, ...	12 Volt coil to be used with
L12024core	Ignition coil, used/core
L12024repair	Repair coil
L12024slotted brass nut	Ignition coil brass nuts, pr
L12036-S	Lincoln distributor to remote coils adaptor
L12105, H/u	Distributor Cap, good used
L12108, H	Distributor cap gasket
L12113, H	Boots, distributor to ign conduit
L12115, H	Rubber ring, distributor cap retainer
L12116, H	Distributor terminal plate, good used
L12116rbt	Ignition terminal plates, pair, rebuilt. exchange...
L12120, 40	Distributor Bushing, Front
L12127, 16Hr	Distributor rebuilt, exchange, '41-'48
L12127, Hr	Distributor, rebuilt, '36-'40, timed and synchro...
L12130, 06Hco	Rebuildable distributor core - (must have good...
L12130, 16H	Distributir, NOS
L12130, H	Used Distributor
L12132, 18	Distributor bushing, rear
L12133gskt	Distributor gasket set, 6 piece
L12140-A, H	Gasket, distributor to coil
L12140, H	Gasket, ign coil-distributor
L12143, H	Distributer base gasket
L12144, H	Bail, distributor cap
L12148, 48	Water pump special hex bolt
L12148,48	Mounting bolt kit for timing cover 5/16'-18 x1'
L12162, 68	Distributor point, movable
L12171, 8EL	
L12174, H	Timing washer scale
L12176, 16H	Distributor cam and weights assy
L12201-r	Rebuilt distributor rotor, exchange or add \$10...
L12201-rebuild kit	Distributor rebuilt parts kit includes 2 rebuilt te...
L12201, H	Distributor rotor
L12218 ford	

L12218, set	Ignition Points, 4 pc. set
L12218, set:L12107	Ign point, moving, pr.
L12219, H	Ignition point
L12220, 18	Plunger, dist. vacuum brake
L12225-B, 18	Spring, vacuum brake
L12226	Distributor vacuum lines (use hex flair fitting e...
L12226, 16H	Distributor vacuum brake line to carb
L12226, H	Distributor vacuum brake tube, '36-'40
L12250-12 volt	Voltage dropping resistors for 12 volt coils
L12250-C, 11A	Circuit breaker for headlights, (Mounter on For...
L12250, 18	Ignition coil voltage dropping resistors, (NOS)
L12250, H	Ignition points set of 4 pieces
L12250, H:L12218/19 H	
L122508-A, 51	Circuit breaker, 30A-window regulator, '46-'48
L12270/74, H	Fender skirt wedge and hook pockets, set of 3...
L12280-IG, H	Ign cross conduit cross-over, '36-'40
L12280-B,86H	Ignition wire conduits, pr. '38-'40
L12280-C, 56H	Ignition wire conduit, '42-'48
L12280-F, 56H	Ignition wire set, '41-8
L12280-G, 56H	Ignition conduit crossover, with overdrive, 41-48
L12280, HB	Ignition wiring, engine harness and conduit as...
L12281, 86H	Spark plug wire set, '38'- '40 (dist terminals no...
L12282-92,H	Ignition wire set, '36-'37 LZ
L12282-93, 16	Spark plug- dist. wire set. '41-'48, with soldere...
L12282-98, 8EL	1949-1951 Lincoln spark plug wire set
L12300-12v	Condensers for coil adaptor
L12300, H	Ignition condenser, original
L12300, H, rp	Ignition Condensers, new replacement, pair
L12300, Hr	Lincoln Script condenser, used, cleaned, chec...
L12405-B, 52	Spark plug, Champion H-10,2-rib, '36-'41
L12405-B, repro	Repro H-10 '36-'41 spark plug
L12405-B, repro:L12405, J-8	Spark plug, J-8
L12405-H10C	Spark Plug, H-10-C, set of 12
L12405, 6H	Spark plugs, set of 12 Original Champion H-1...
L12405H12	Spark plugs, Champion H-12
L12405nut	Knurled brass spark plug nut
L12409, 78	Spark plug knurled brass nut
L12872	Voltage reducer for gages and clock 12 volt to...
L13007	Headlamp sealed beam
L13007-A, 48	Headlight bulb, 6-8V 32-32 C.P.
L13007-B, 48	Headlamp bulb, 50-32 CP
L13007-halogen	7" semi sealed beam with EH-H4 6V bulb
L13007-Q6	Quartz halogen bulb, 6 v
L13007, 09A	Headlight sealed beam, original GE
L13007, 48	H/L bulb, 6-volt
L13008, H	Head lamp bezel, '36-7
L13010, H	Headlamp body, 1936-7 with reflector and bul...
L13026-S, 01A	Headlamp door screws
L13028, 78	Headlight reflector, '38-9
L13028, H	Headlight reflector, '37-8
L13030, 78	Headlight adjusting ring assy

Item	Description
L13039, 01A	Gasket, heaslamp bulb to retaining ring
L13044-A 11A	Headlight bucket gasket, '42-'48
L13044, 06H	Gasket, headlight case to fender, '39-'41
L13044, 26H	Headlight door, RH, '42-8
L13044, 5EH	Headlight door, '42-'48
L13045, 06H	Headlamp door, restored
L13045, 06Hu	Headlight rim, '40, used, needing restoration
L13045, 16H	Headlight door, '41

L13045, 26 H	Headlight door, LH, '42-8
L13045, 5EH	Headlight door, '42-'48
L13045, 96H	Headlamp door
L13045,16H	Headlight door, 1941
L13059, 06H	Parking light lens, '40
L13060, 86H	Head light lens, 1938
L13060, 96H	Headlight lens, '39
L13060, H	Headlamp lens, '36-'37
L13065, 26H	Parking/turn signal lens gasket, pr.
L13066, 96H	Head lamp lens gasket
L13076	Headlight wiring harness
L13076, H	H/L socket & harness, '36-7
L13077, 51A	Headlight bucketwire grommet
L13092, HB	
L13202,26H	Parking/turn signal lamp, front,'42-'46
L13208, 16H	Parking lamp lens, '41
L13208, 16Hr	Turn signal lens, '41, repro
L13208, 26H	Lens, parking light, '42-'48
L13209, 16H	Gasket, parking lamp lens, pr
L13210, 16H	Parking/signal lamp bezzel, '41
L13217, 16H	Pad, parking light, '41, pr.
L13217, 26H	Gasket, parking light to body, pr.
L13304-A,5EH	Turn signal lever assy., '46
L13304 handle	Turn signal handle (specify year)
L13304hndl,5EH	Directional signal handle, '42
L13315. 5EH	Directional switch lever tension switch
L13315/6/7	Turn signal spring kit
L13316, 29AS	Turn signal switch pawl spring
L13318, 16H	Cam(directional signal turn off)
L13335, 16H	Turn signal switch
L133350-6V	Turn signal flasher, 6v
L13340,16H	Indicator jewel with gold plated bezzel
L13350, 16H	Turn signal flasher assy., 6 volt
L13404, H	Rear lamp assy., RH '36-'37, w/lens & trim rin...
L13405	Lamp assembly (rear) Left, disassembled with...
L13405, 86H	Tail Lamp Assy, '38-'39
L13406	Tail lamp license bracket, '36-'37
L13407-A	Tail lamp '42-'48
L13407-A, 26H	Tail light assy
L13408-A, 26H	Tail lamp, socket & wire assy, LH, '42-'48
L13408, 86H	Tail lamp body, 1938-9 LZ, good used
L13409	Lisence frame, stainless, adjustable, NOS
L13410-RK	Light socket repair Kit
L13412-stop	LC Stop light & '41 LZ tail bulb socket
L13412, 81A	License lite pigtale, '39-'48
L13419	Support, tail lamp license bracket, '36-'37
L13420-C,16H	Tail lamp rim pads, '41 LC, pr
L13422, 26H	Lisence & stop light support casting
L13445, H	Lens, lisence illuminating
L13448, 86H	Tail lamp lens bezzel
L13450-A, 06H	RH tail tight lens, '40 LZ
L13450-B 16H	Rear lamp lens, L.H 1941 LC, Reproduction
L13450-B,06H	Rear lamp lens, RH, '40-'41 LC
L13450-C, 16H	Tail lamp lens, late '41 LC, RH
L13450, 26H	Tail lamp lens, '42-'48
L13450, 86H	Tail lamp lens, '38-'39
L13450, H	Tail lamp lens
L13450, Hr	Tail lamp lens, '36-'37, repro, plastic
L13450/1-B 16H	Rear lamp lens, late, raised, L or R 1941 LC, ...
L13451-A, 06H	Tail lamp lens, LH, 1940 LZ

Item

Description

L13451-B, 06H	Rear lamp lens, LH, 1940-41 LC
L13451, 168H	Tail lamp lens, left, Custom
L13452, 06H	License lamp assy, '40 LC, reproduction
L13452, 16H	Rear license and stop light assy, '41 LC
L13452,06H	License lamp housing and support, '40 LC
L13452. 16H	Stoplight/license bracket, '46 LC
L13456	Tail lamp lens retainer
L13456, H	Retainer, tail lamp lens
L13460, 86H	Tail lamp lens gasket
L13461-B, 06H	Gasket, tail lamp to lens, pr., '40-'41 LC
L13461, 26H	Tail lamp lens gasket, '42-8 -TE-5
L13461, 86H	Tail lamp lens gasket
L13465-6V	Stop light bulb 21 cp, 6 volt
L13465-6v, 40	Tail lite bulb 33/39 6v
L13465-Q6, 11	Tail lamp bulb 50/20W 6v
L13465-Q6, 11A	Halogen tail light/turnsignal bulb with staggered...
L13465-Q6, 40	Tail lite bulb, quartz
L13465-Q6, B	Stoplight quartz bulb, 50 watt
L13465, 11A	Bulb, 21-3 c.p., index pins offset, parking, tur...
L13465, B	6 volt interior bulb
L13466-6v, 78	Dash lite bulb
L13466-Q6, B	Running light, quartz 20 watt, single filament
L13466, B	6volt interior bulb
L13466,78	6 volt interior, instrument bulb
L13466,B	6 volt interior bulb
L13470	
L13476, 5EH	Tail lamp extension
L13477, 5EH	Tail lamp extension
L13480, 11A	Stop Light Switch
L13487, B	Wire connectors, pack of 10 Vintage B-14487
L13492/537, 16H	gasket, stop light lens to reflector
L13520-B, 06H	Rear lamp-to body rubber gaskets, pr.
L13528, 16H	Shield, headlamp dimmer switch
L13531-A, 16H	Headlight dimmer switch boot, '40-8
L13532-A, 16H	Switch, dimmer, '41-'48
L13532, 06H	H/L dimmer switch, '37-'40
L13532relay	Relay, headlight, 6 volt
L13536, 16H	Stop light lens, '41 LZ, Custom, '41-8 LC
L13536, 26H	Stoplight lens, 1942-1948 LZ
L13537, 16H	Stop light lens to housing gasket, '42-'48 LC
L13538, 26H	Tail lamp lens retainer, Right inner
L13540, 19A	Turn signal lens retainer, '42-'48
L13540, 26H	Tail lamp lens retainer, right, outer
L13541-A, 26H	Retainer, tail lamp lens left inner
L13550-A, 26H	Stop/license light assembly, '46-'48 Lincoln
L13550-B, 26H	Lamp assembly, license and stop, '42-'48 LC
L13550, 16H	Stop/license lamp body, reproduction casting
L13553	Cobra light casting
L13555-A, 16H	License & stop light mounting plate
L13555, 26H	License and stoplight mounting bracket
L13556-S, 01A	Deck lid base mount set (tag light socket)
L13556-S, 11A	License lamp and lens assy
L13560	Socket and wire assy, license/stop
L13564, 16H	License plate lamp lens, LZ
L13564, 96H	License light lens
L13564, 99A	License light lens, '
L13568-A, 99A	License lamp lens gasket, inner, '41-48LC
L13568/9, 01A	Deck lid lens gasket set, 40-'48
L13569, 99A	License lamp gasket, '41-8 LC
L13570	Retainer, stop & license lamp holder, pr.
L13572-A, 16H	License & stop lite pad, '41 LZ

L13572-A, 5EH	Pad, License & Stop lamp body
L13573-A,5EH	Pad, license and stop lamp body, (good used)
L13577, 16H	Cobra stop lamp cover plate assy
L13586,16H	Headlight hi-beam indicator and socket assy, '...
L13620	Stop/license lamp bracket rubber pad
L13620,26H	Lisence /brake lamp bracket pad
L13630,	Socket assy, luggage comp. lamp

Item	Description
L13706, 26H	Instrument panel floor lamp assy
L13710, 26H	Socket and wiring assy w/bulb, instruments
L13712, 26H	Glove box door assembly lamp assy & mounti...
L13716, 26H	Lens & rim assy, floor light
L13730, 40	Bulb, dome, courtesy, instruments
L13740-A, 21A	Dash light dimmer switch, maroon knob
L13740-A, 51A	Dimmer , dash lights, chocolate
L13740-B, 5EH	Dash light dimmer switch
L13752-A, 5EH	Floor lights switch/dome light switch
L13752, 16H	Floor light switch, door pillar
L13752, 16H:L13769, A	Dome light switch
L13752, 16H:L13770, A	Dome lamp switch plate
L13771,G	Dome light lens
L13783-A, B	Dome light lens, '36-'48
L13801/2	Horns, pr, '47-'48
L13820, H	Horn, RH, 19361
L13821, H	Horn, left 1936
L13822-A, 81A	Trumpet Horn bracket grommets, pr.
L13830, 26H	Horn bracket, right, '42-7
L13830, HB	Horn bracket, '37-'41
L13831-A, 26H	Horn bracket, left, LZ 42-'47
L13831, HB	Horn Bracket, 37-41, LYH
L13832/3	Horns, pr, Trumpet type, L & R
L13833, 06H	Horn assy, less bracket, '37-'41
L13842, 96H	Horn Relay, "36-'47 original
L13853-A, 7RA	Horn relay, '47-'48
L13912, 91A	Horn bell -to-bracket gromet, '39-'47
L14300-500,86	Complete engine/body wiring harness set, co...
L14300-s	Battery cables, set of three
L14300, 06H	Cable, battery to solinoid switch
L14300, H	Battery cable, battery (-) terminal to solenoid a...
L14301, 06H	Cable, battery to ground, '40-8
L14301, 40	ground strap '36 ford
L14301, 48	Battery to ground cable (+) approx 13' long
L14301, 86H	Battery cable to ground
L14301, 96H	Battery ground strap without pigtail, '39
L14305-B, 16H	Engine wiring harness, '40='42
L14305-C	Ignition conduit, pr.,'41
L14305-C, 5EH	Engine wiring harness, '46-'48 LC
L14305,-3	Ignition wire conduit cross-over, '41-8, 1 '
L14305, 16H	Spark plug wire set, '41-'48
L14305, 5EH	Engine wiring harness
L14305, 86H	Spark plug wire set, '38-'40, Terminal plate en...
L14305, H	Wires, ignition, set, '36-'37
L14308	Horn ring switch
L14308-A, 16h	Horn button wire assy
L14308-B, 16H	Wire assy, horn button, 60.5' long, '41 LC
L14308-B, 26H	Wire assy, horn button-61' long, '42-8LC
L14332-B, 5EH	Conv. top switch to ckt breaker, '46-8
L14378-B, 5EH	Overdrive wiring harness
L14381-A, 56H	Wire Assy, Trans overdrive to ign condensers
L14381, 16H	Wiring harness, overdrive relay to condensers

L14381, 26H	Wire assy, overdrive relay to coil
L14382-B, 5EH	Wiring harness, overdrive, '46-'48
L14382-C,16H	Overdrive wiring harness, solenoid to relay
L14383, 16H	Harness, Overdrive relay to ign. coil
L143a	Wheel spindle, left, 1939-40
L14401- A, 5EH	
L14401, 96H	Cowl wiring Harness, '39
L14415, 91A	License lite pigtail
L14431, 06H	Cable, solenoid to starter, '38-'48
L14431, H	Battery cable, solenoid to starter, approx 36' l...
L14450-A, B	Starter cable support assy.
L14461-A, B	Terminal, wire, bullet type
L14463, B	Terminal, wirte end
L14486	Male wire connector. pack of 10
L14487, B	Wiring connecting sleeve
L14519	Hyd pump ground strap

Item	Description
L14526, 51A	Fuse, clock, 2 ampere
L14548	Starter cable support bracket grommet
L14550-A, B	Support (solenoid switch to starter cable)
L14550, B	Support, solinoid-starter cable '39-'48
L14567	Speedoneter cable grommet
L14577-A,51A	Clip, fuel line to firewall
L14577-B, 86H	Clip, fuel line to dashboard & tail light wire to f...
L14598, 11A	Clip, Overdrive wiring to floor pan
L14603-B, B	Grommet, hydraulic tube through firewall
L14603, 48	Firewall wiring grommet
L14605-A, B	Choke/ throttle grommet-firewall
L14605,18	Hood pull cable grommet
L14605,B	Grommet, firewall
L15000-A, 16Hu	Clock, used
L15000-C, 06H	Clock, used, for parts only
L15000-C, 5EH	Clock assy LHD-Chrome plated hands and sil...
L15000-D, 5EH	Clock, '47-8
L15000-lens, 5EH	Clock lens, '42-'48
L15000, 36H	Clock, works only
L15021, 48	Bulb, - S.C.- 1 C. P.
L15055	Lighter socket assy.
L15055, 11A	Cigar lighter element and well
L15055, 5EH	Lighter/socket Assy, complt, '42-'48, NOS!
L15055E	Lighter and well assy. replacement type
L15116	
L15118, 01A	Pipe, elbow to air inlet silencer
L15118, 91A	pipe from silencer to control assembly
L15119, 91A	Hot air heater elbow, silencer inlet
L15122-A, 5EH	Heater switch, '42-48
L15122, 6H	Heater knob, '46-'48
L15142-plug	Heater water outlet stainless plug
L15142, 91A	Hot water heater valve in cylinder head
L15160	Heater hose to left water pump nipple
L15167-ftg	Left water pump heater hose fitting
L15200-A, 5EH	Fog lamp, clear, with black horizontal lines
L15200-B, 5EH	Fog lamp bulb, clear
L15201/2, 5EH	Fog lamp assy, used
L15214, 5EH	Ring, fog lamp retainer
L15220-B, 11A	Foglight sealed beam, clear, 1947-1948
L15220-C, 11A	Foglight, amber, '46-'47
L15220, 01A	Spotlight bulb
L15224, 5EH	Fog light switch, toggle
L15244/5, 5EH	Fog light harness, '46-8

L154a	Core Charge, Brake shoes
L15622811-Pin	LC door hinge pins, set of four
L16038-A, 06H	Moulding, stainless, right front fender
L16038-A, 26H	Moulding, R.F. fender , stainless
L16038-B, 06H	Moulding, right front fender, '40-1 LC
L16039-A, 26H	Stainless moulding LF fender
L16039-B, 06H	Moulding, left front fender, '40-1 LC
L16047, 06H	Front fender brace, '40-1
L16048, 06H	Front fender brace, '40-1
L16055, strap	Emboss LZ script on customer's part
L16094-B, 26H	Brace, (front fender to frame) right, '42-'48 LC
L16250-A, 06H	Fender skirt, '40-'41 LZ
L16250-B, 06H	Fender skirt, RH, '40-'41 LC
L16250, 26H	Rear fender cover plate, RH, '42-8
L16250, 96H	Cover plate (skirt), rear fender, RH, '38-9
L16250, H	Rear fender cover plate less moulding, welt & ...
L16250/1-A, 06H	LZ to LC extensions, pr
L16250/1, 26H	Fender skirts, '42-'48, pr.
L16251-A, 06H	Fender skirt, LH, '40-'41 LZ
L16251-B, 06H	Fender skirt, LH, '40-'41 LC
L16251, 26H	Fender skirt, less welt, retainer & moulding19...
L16251, 96H	Fender skirt, '38-'39, LH
L16251, H	Rear fender cover plate,LH
L16254, 26H	Fender skirt retainer bracket
L16268, H	Fender skirt wedge
L16270, H	L16270, H
L16270/4/88	Fender skirt(s) anti rattle gromet 8 piece set
L16274, H	Receiver, fenderskirt hook receiver
L1628-end	Saw tooth closure, '40-'41 LC lower stainless
L16280-A, 26H	Fender skirt moulding, '42-'48
L16280-B,06H	Moulding, rear fender cover plate, right, '40-1 ...
L16280, 26H	Moulding, rear fender cover plate, RH, '42-'48
L16280, H	Rear fender cover plate moulding
L16280/1-Repro	Fender skirt mouldings fabricated from LZ
L16281-A, 26H	Moulding, fender skirt, LH, '42-'48
L16281-B, 06H	Fender skirt moulding, LH, '40 LC
L16281, H	Rear fender cover plate, LH
L16284, 06H	Lock assy. RH fender skirt, '40-'41
L16284,06H	Fender skirt latch
L16285, 06H	Fender skirt latch assy, '40-'41, LH
L16286, 06H	Fender skirt operating stud, rh, '40-'41
L16286, H	Operating stud, rear fender skirt lock, RH
L16286/7, 06H	Fender skirt operating studs, stainless, pr., '40...
L16286/7, H	Operating stud, rear fender cover plates, L/R, ...
L16287, 06H	Fender skirt lock operating stud, '40-'41
L16287, H	Operating stud, LH femder skirt
L16288, H	Speciaplty L165-2 skirt lock pads, pr.
L16292, 26H	Fender skirt-fender rubber welt
L16292, H	Rear fender cover plate welt
L16292/3-A, 06H	Fender skirt to fender rubber welt, LZ '36-'41, ...
L16292/3-B, 06H	Welt, fender cover plate (skirt) , '40-'41 LC
L16293, 26H	Welt, fender skirt, '42-'48
L16293/4, 26H	Fender skirt rubber seal, pr
L16293/4, 96H	Welt, rear fender to cover plate, pr.,1936-1941...
L16294, 26H	Retainer (rear fender cover plate rubber welt)
L16346, H	Anti-squeak, fenders-to-body, 50'
L16349/50 06H	Rubber stone shields, pair, '40-'41 LC
L16349/50 26H	Rear fender rubber stone shields, pair, '42-'48
L16377, 06H	Gas tank filler lid springs, pr.
L16378-A, 06H	Gas tank door bumpers
L16382-A, 26H	Stainless moulding, rear fender front right

L16382-B, 06H	Moulding, rear fender,RH, lower front, stainles...
L16382-B,06H	Moulding, rear fender, right, '40-1 LC
L16383-A, 26H	Stainless moulding, rear fender, left, front
L16383-B, 06H	Moulding, left rear fender, stainless, LH, '40-'4...
L16383-B,06H	Moulding, rear fender, left, '40-1 LC
L16398-A	Moulding, rear fender, rear, RH, '42-'48
L16398-A, 26H	Lower stainless, r. fender ,rear
L16399-A, 26H	Lower stainless, L fender, rear
L16421, 06H	Splash shield, rear fender, LH, '40-'41
L16421, 26H	Rear fender splash shield, '42-'48, LH
L16422, 06H	Splash shield, RH
L16422, 26H	Rear fender to frame splash shield, Right
L16462	Moulding, running board, RH
L16462, H	Molding, running board, RH '36-7 sedan, 90" l...
L16463	Moulding, running board, LH
L16463, H	Molding, running board, '36-'37
L16601-A, 16H	Hood ornament pad
L16602, 86H	Hood ornament base 'U' clip, screw, lockwash...
L16606, 06H	Hood emblem, '40 LC
L16606, 26H	Hood front emblem ' Lincoln' '42-'46
L16606, 86H	Moulding, hood, right side, 1938
L16606, 96H	Hood emblem, front of hood, '39
L16607	Grill gold shield, '46-'48
L16607, 5EH	Deck lid shield, rubber underlay,and chrome e...
L16610	Hood sound deadener
L16624-A, 06H	Hood ornament
L16624-A, 26H	Hood ornament assembly, 1942 only (chrome ...
L16624, 5EH	Hood ornament, '46-early '47 wing \$195, Ball ...
L16624. 5EH	Hood ornament, '47-'48
L16626, 16H	Hood ornanent gold ball-'41
L16642-B, 06H	Hood Latch, '40LC
L16642, 26H	Hood latch assembly, '41-'48
L16717/baffle	Radiator Air Dam, '42-'48
L16723, 16H	Moulding, hood side, right
L16724, 8L or 0L??	Medallion, front fender "Lincoln"
L16742, H	Hood anti-squeak, with 17 # 6X3/8binding hea...
L16758-A, 26H	Bumper, hood to cowl
L16758-D	Bumper, hood to cowl
L16758 round	Hood to cowl round bumpers, pr.
L16776-A	Hood ornament base
L16776-A, 06H	Hood ornament base, '40 LZ
L16776-A, 26H	Hood ornament base, '42-'48
L16776-B	Hood ornament base, lower 'V-12'
L16776, 16H	Hood ornament base, '41 LC
L16776gasket	Hood ornament base gasket
L16776hardware	Hood ornament hardware
L16800-A, 26H	Hood hinges, pr '42-'48
L16800-C, 16H	
L16812, 06H	Hood hinge spring, '40-'41 LC
L16812, 86H	Hood hinge spring, '38-'41 LZ
L16835, 6H	Hood ornament kit, tear drop design, '47-8
L16835,16H	Hood ornament assy., '41-'48
L16892, 06H	Hood safety catch & bracket assembly
L16896, 16H	Hood auxilliary catch, 1941
L16896, 26H	Hook, hood auxilliarycatch, '42-'48
L16916-A, 16H	Hood release cable, '41 LZ
L16916-B, 16H	1941 Lincoln ?Continental hood latch release ...
L16916-B,6H	Hood latch control
L16916,	Hood release cable
L16925	Hood latch spring
L16927	Guide, hood lock spring

L16929	Dowel, hood lock
L17005	Tool bag assy
L17005-A, B	Toolbag assy., '36-'42
L17005-B, 51A	Tool bag assembly, 46-'48
L17005-B,51A	Tool bag, 1946-48
L17014, 16H	Tool kit, '41
L17014, 16H:L17005	Tool Bag
L17015	Wrench, open end -7/16" x 1/2"
L17016, 01A	Wrench, Ford Script, 9/16' x 5/8'
L17017-B, 01A	Wrench, box end, spark plug & cyl head nut
L17017, 01A	Head nut and spark plug wrench, 1940 only
L17017, 81A	Wrench, spark plug & cyl. hd. nuts, '36-'40
L17017, H	Cyl. head nut/spark plug wrench, '36-early'38
L17019, 68	Tire iron
L17020, B	Screwdriver, Ford/Lincoln
L17021-A, 01A	Wrench, adjustable, Ford script (monkey wren...
L17021, B	Wrench, adjustable '36-'48
L17025A, B	Pliers, Ford script
L17035-B, 5EH	Wheel lug wrench and jack handle
L17035, 01A	Lug wrench, 1936-42
L17035, 68	Wheel lug wrench, '36-'41
L17052-B, 48	Pump (tire) assy.
L17052-B1, 48	Tire pump, '36-'42
L17080-B 96H	Jack base, '38-'42
L17080-B, 5EH	Bumper jack, '36-'42 (SPECIFY YEAR)
L17080-p	Pouch, jack assy, '36-'42
L17080, 6H	Jack assembly, '46-'48
L17080, 86H	Jack assembly, 1938-early 1939
L17080, 96H	Jack assy, '39-'42
L17080, 96H:L17080-shaft	Jack shaft, '36-'42
L17080, 96Hba	Base only for ,jack assy 96H-17080
L17080, bag	1938-1940 Lincoln jack bag
L17081, 78	Tire iron and jack handle, '36-'42
L17088, 86H	Jack base, '38-'42 Lincoln
L17125-A1, 78	Gun assy.,(lubricating)-hydraulic
L17125, 78	Grease gun assy, Alemite, 38-'48
L17255-C, 5EH	Speedometer assy, '46, chrome pointer
L17255-C,06H	Speedometer face, silk screen (old paint peali...
L17255-D,5EH	Speedometer assy, '47-48, gold pointer
L17255, 96 H	Speedometer/inst cluster, '39 LZ
L17255, 96 Hlns	Speedo/instrument cluster lens
L17260-A, 06H	Speedometer cable assy., '40 LZ w/o 2spd, 7...
L17260-A, 16H	Speedometer cable assy, '41-'48 LC w/ OD, '94'
L17260-A, 26H	Speedometer cable shaft and housing assy., ...
L17260-A, 86H	Speedometer Cable, '39LZ, std axle, casing 1...
L17260-A, 96H	Speedometer cable assy, Speedo to gear box
L17260-A, HB	Speedo casing and shaft, '37 Lincoln Zephyr
L17260-B, 06H	Speedometer cable assy., speedo adapter to ...
L17260-B, 16H	Speedometer cable, 27' Columbia adaptor to ...
L17260-B, 26H	Speedometer cable assy, '42-'48 L, w/overdriv...
L17260-B, 96H	Speedo cable, speedo adapter to torque tube,...
L17260-B,06HF	Speedometer cable assy, '40 '41 LC w/std tra...
L17260-C, 06H	Speedometer cable assy, '40-'41 LZ/LC w/ col...
L17260-C, 26H	Speedometer cable assy, '38-'39, 102'
L17260-D, 06H	Speedometer cable, '40 LC w/ columbia 2-sp ...
L17262-B, 26H	Speedometer cable shaft assy, '42-'47 LZ w/o...
L17265, 01A	Emergency brake and speedometer cable gro...
L17270-B,B	Speedometer gear and cap assy, 1:1.444
L17275,B	Speedometer drive cap gasket
L17285, B	Speedometer drive gear
L17286, B	Speedometer drive gear lock ring

L17290, 19A	Speedometer drive rear spacer
L172b	Pedal cover
L172c	Rear View Mirror, inside
L17450, 78	Windshield wiper linkage retainer plates and s...
L17468-B, 06H	W/S wiper motor bracket
L17470-A, 16H	Windshield Wiper control stem assy
L17470-A, 26H	Windshield wiper control, '46-48
L17470-C, 26H	Windshield wiper control, 4 outlet, '42 Custom...
L17478	W/S wiper motor bracket
L17481, 78	Wiper arm nuts, pr.
L17492-A, 06H	W/S wiper housing and connecting arm, '40 LZ
L17492-B, 06H	Windshield wiper transmission, '40 LC
L17492-B, 5EH	Windshield wiper tower and linkage, RH, '46-'...
L17492, HB	Wiper tower, RH, '37-8 LZ
L17493-A, 16H	Windshield wiper transmission housing and c...
L17493-A,5EH	Wiper trans. chain & connecting link
L17493-B,5EH	Windshield wiper tower and linkage, LH, '46-'...
L17493, 06H	Windshield wiper housing and connecting link
L17493, 96H	Windshield wiper housing, connecting arm an...
L17493, HB	W/S wiper pivot housing and connecting link, '...
L17508-RBLD	Rebuild wiper motor
L17508, 16H	Motor (electric windshield wiper), '41-'42
L17508, 5EH	Windshield wiper motor, '46-'48
L17508,5EH	Windshield wiper motor, '46-'48
L17513, 16H	Knob, electricwindshield wiper control switch
L17513, 5EH	Knob, windshield wiper control, '46-'47
L17513, 6H	Windshield wiper control knob, '47-8 dark mar...
L17526	Windshield Wiper Arms, pr, - '40 LC
L17526-8.25"	Wiper blade 8.25"
L17526 (early inner	Inner wiper arm casting-clip-on type
L17526 inner clip-on	Push-on inner wiper arm
L17526, 06H	Windshield wiper arm assy, articulated, '40- e...
L17526, 06H:L17526cst	Cast inner wiper arm, '40 LC
L17526, 06H:L17526outer	Outer arm, visionall wiper
L17526, 06H:L17526sprg	Visionall wiper arm spring
L17526, 06H:Visional hook	Pivot spring hook
L17526hub	Wiper arm hub, '39-40
L17526outers	Visionall wiper 5 inch outer arm
L17528-7.5"	Wiper blade 7 1/2" long
L17528-8"	Wiper blade 8" long United Pacific # A7026
L17528-A, 51A	Windshield wiper blade, 9', '46-48 only
L17528-B, 99A	Windshield wiper blade, 8.25" long, Lincoln K ...
L17528, 99A	W/S wiper blade, '36-'42 LZ, '41-'42 LC
L17528, B	Wiper blade, 7.5"
L17529-A,16H	W/S wiper arm, 41-'42
L17529-B 16H	Wiper arm, '41-'42 LC

Item	Description
L17529-B 16H:L17529-hook	Hook for '40 wioer arm
L17529-B, 5EH	Windshield wiper arm, '46-8 LC
L17529-B, 5EH:L17527, 7C	Wiper
L17529-B,16H	Windshield wiper arm, , '41-'42 LC
L17529,-B,5EH	Windshield wiper arm, '46-'48 LC
L17529, 06H	Wiper Arm, right (40LZ)
L17529, 78	Wiper arm, '36-'41
L17529, 96H	Wiper arm, '37-'39 LZ
L17531, 06H	Windshield wiper linkage grommet and retain...
L17534	Switch and wiring assembly, electricwindshiel...
L17536	Tube, inlet manifold vacuum connection
L17536, 6H	Intake manifold vacuum connection, '47-8', .3...
L17536, 86H	Vacuum line and fitting-manifold

L17537-A,06H	Vacuum line through firewall
L17539-A, 06H	Windshield wiper vacuum tube through the da...
L17540	Clip, wiper link anti rattler
L17542-A, B	Distributor vacuum brake tube fitting
L17543-A. 06H	Tube, inlet manifold to vacuum hose
L17556-A, 06H	W/S wiper chain housing gaskets, pr.
L17556-B, 06H	Gasket, w/s wiper chain housing, pr. bin: C-04-4
L17557	Wiper tower bracket
L175d-inner	L/C inner rocker panel
L175l	LC deck lid latch receiver, rt.
L175j	Door lock knob, '40 L/C, maroon
L175k	Door lock knob, '40 LZ, maroon
L17604, 51A	Windshield washer control valve
L17606-B, 51A	W/S washer bracket
L17613, 51A	Windshield washer pump assy.
L17614, 51A	Windshield washer bracket
L17618	Windshield washer bottle
L17618, 5EH	Jar, W/S washer, LHD '47-'48
L17640	Vacuum Tank and valve
L17640, 5EH	Tank, windshield wiper vacuum
L17663, 5EH	Valve assy, vacuum storage tank
L176a	1940 LC hood orn. Base
L176b	'40 LC rt. Tail lamp
L176c	'40 LC stop light assy
L176d	LC trunk hinges, latches
L176k	Lower Stainless Trim, full set, repro, '40-'41LC
L17700	Inside rear view mirror with retaining bracket a...
L17741, 68	Hinge pin mirror
L17741, B-MH	Mirror head, hinge mirror
L17750-B, 96H	Front bumper assy, complete with guards, ar...
L17751, M	Antisqueek, hood lace, 6', to cowl, w/ 17 # 6 ...
L17751, M:351629-S28A2B	SS screw, # 6, 17
L17751, M:L17751	Hoodlace,5/8 x 3/16, 6'
L17751, M:Lbuckles	Hood lace ends, pr.
L17752, 26H	Center front bumper assy, '42-'48
L17754-99	Bumper arms front & rear, fromt bar spacers, ...
L17754,	Arm, bumper, front outer
L17755, H	Arm, front bumper, outer LH
L17756, 26H	Bumper, front, RH, '42
L17756, 5EH	Bumper RF, '46-8
L17757-B, 96H	Bumper, front outer, '40
L17757, 06H	Bumper, front left, '40
L17757, 26H	Bumper, face bar , LH, '46-8
L17757, 5EH	Bumper, front left, '46-'48, used..
L17757, 96H	Bumper, front, outer, '39
L17758	Bumper bolt, oval chrome cap
L17758-SS	Bumper bolt, lock washer and hex nut, Polish...
L17758, 26H	Bumper bolt, carriage head, 1/2'-20 x 1 1/2'
L17758, 48	Bumper bolt, ovat
L17758,48	Bumper bolt, oval SS
L17762, 96H	Bumper bar, front center
L17764	Spacer, front bumper bars, center
L17764, 96H	Front bumper bars spacer, '39
L17764,06H	Bumper center bar spacer, '40
L17764,96H	Bumper center bar spacer, '96

Item	Description
L17765, 16H	Bolt, front bumper bar spacer
L17765, 96H	Bumper bolt,front center tear drop-7/16-14 x 3...
L17765,06H	Bumper center bar spacer bolt, tear drop, 7/16...
L17766, 26H	Right front inner bumper bracket

L17767, 26H	Hanger, front bumper, inner, left
L17770, 16H	Clamp, front bumper impact bar, RH
L17771, 16H	Clamp, front bumper impact bar
L17772/3, 86H	Bumper arm grommets front, pr., '38
L17772/3, 96H	Bumper arm grommet, L/R '39
L17772/3, H	Bumper arm grommets, front, pr., '36-7
L17772/3,06H	Bumper hanger grommet, front, '38-'41 BG103
L17775-B, 86H	Rear bumper assy w/guards hangers shrome ...
L17778,06H	Bumper rear face bar and guards, 1940 LC
L17779,16H	Accessory bumper guard, rear '41 LZ
L17779brkt	Mounting bracket, accessory bumper guards, '...
L17782-A, 5EH	Rear bumper guard tie rail, '46-'48 LZ
L17786, H	Arm, rear bumper, inner RH
L17787, H	Arm, rear bumper, LH
L17792/3, 06H	Bumper hanger grommet, L & R
L17792/3, 96H	Bumper arm grommets, rear,'39
L17792/3, H	Bumper arm grommets, rear, pr.
L17792/3,86H	Bumper srm grommet, rear, '38
L17795, H	Ar, rear bumper, outer RH
L17796, H	Rm, rear bumper, outer LH
L17797, 5EH	Bumper guard, LF
L17798,H	Bumper arm, front right inner
L17799, H	Bumper Arm, front left inner
L17801-B, 26H	Stone guard, rear bumper, '42-'48 LC
L17801, 06H	Stone deflector, rear
L17808-A, 16H	
L17808, 06H	Rear bumper hanger cover
L17811	Guard assembly left outer
L17906-B, 5EH	Bumper, rear, '46-'48 LC
L17906, 96H	Bumper, rear, '39
L17984, 06H	Bumper guard, rear 1040
L17984, 5EHu	RR bumper guard, '46-'48 LC
L17984, 96H	Bumper guard, rear, '39
L17985, 5EHu	LR Used bumper guard, '46-'48 LC
L17988, 5EH	Bumper guard, end, RH
L17989, 5EH	Bumper guard, end, LH
L17996, 06H	Bumper guard, RF, '40
L17996, 96H	Bumper guard front right
L17996. 26H	Bumper guard left front '46-8, NOS
L17997, 06H	Bumper guard. LF, 1940
L17997, 16H	Bumper guard, left front, 1941
L17997, 26H	Bumper guard, RF, '46-8, NOS
L17997, 96H	Bumper guard, front left, '39
L180 770 04 36 30	Top locking mechanism, right
L18045-B, 16H	Shock absorber, '36-'41
L18045-B, 5EH	Rebuilt RF shock absorber, '42-'48
L18046-B 5EH	Rebuilt LF shock absorber, '42-'48
L18046-B, 16H	Shock absorber, LH, '36-'41
L18055-B, H	Sock absorber link, front, '37-'39
L18056, HB	Shock absorber link, front, '37-'48
L18080-A, 16H	Shock absorber body and arm assy. RH, 1941...
L18080-A, 51A	Shock absorber, RR, '38-9
L18080-B, 5EH	Rebuilt RR shock absorber, '42-'48
L18081-A, 16H	Shock absorber body and arm assy., LH,..194...
L18081-A, 51A	Shock absorber, LR, '38-9
L18081-B, 5EH	Rebuilt LR shock absorber, '42-'48
L18168spr	Gas tank filler door springs, pr.
L18207, H	Foglights kit, Lincoln, '36-'48
L18293, 5EH	Automatic windshield washer installation kit wi...
L18303-16, 01	Wheel beauty ring, 16', '40-'41
L18303-16, 19	Wheel beauty ring, ribbed, stainless, 16'

L18303-16, o1A
L18303-A, 29A
L18303, 01A

Trimring, 16' 4-rib
Wheel trim ring, '42-'46
Wheel beauty ring

Item	Description
L18303, 19A	Trim ring, '40-'41
L18303, 48	Wheel trim ring, '36-'39
L18303, 6M	Wheel trim ring, '47-'48
L18303,48	Wheel trim ring, '36-'39
L18306-A, 48	Key, trunk/glovebox lock, original Hurd
L18306, 01A	Key, rear deck & glove box door
L18306,01A	Luggage comp & glove box key, original Hurd
L18309 nut	Spare wheel lock nut
L18312	Spare wheel lock
L18312-NUT	Spare wheel lock special lug nut
L18331, 01A	Inner beauty ring
L18370-B, 96H	Master Cyl. rebuilding kit
L18371, 96H	Front wheel cyl repair kit, 1-1/8"
L18372, 96H	Rear wheel cylinder kit, 1"
L18373, 68	Fuel pump rebuilding kit, 1936-41
L18377	Brake shoe single axle set , '39-'48 (exchange...
L18377. 96H	Brake Shoes, full set, exchange
L18392-A, 16H	Steering and ignition lock repair kit with stand...
L18403-A, 06H	Mirror, outside left, '40 Lincoln Zephyr
L18403-A, 06H:L18403-lens	Mirror glass, side view mirrors
L18403-A, 26H	Outside rear view mirror, LH, '42-'48 Lincoln Z...
L18403-B, 06H	Mirror assy, LH, '40-'48 LC
L18403-B, 06H:8A-18402-A	Door mount mirror, '49-'51 Ford car
L18403-B, 06H:L18414-MH	Peep mirror head only
L18403-B, 06HF	Outside rear view mirror, RH, 1940-48 LC
L18403-hd	Outside mirror head, 4'
L18403, 48	Hinge pin curved arm outside mirror by Bob D...
L18403, H	Outside Mirror, hinge mount
L18443-A	Defroster assy
L18443-C, 16H	Heater assyw/ dual defroster, LC
L18455-9,06H	Hot air heater fabric tubing and clamps
L18455-A,06H	Heater assy., Hot Air, '39-'40
L18455-C, 16H	Heater (front compartment hot air) complete w...
L18456, 16H	Motor/blower assy, hot air heater, '40-1
L18459, 06H	Silencer assy, hot air heater, '40-1
L18465,06H	Hose, asbestos and clamp assy, repro (no as...
L18467-C,26H	Heater, hot water, passenger side
L18470-B, 5EH	Hot water defroster assembly, restored Post w...
L18473-A, 5EH	Defroster core, '42-'48 LZ
L18473-B, 5EH	Defroster core, '42-'48 LC
L18474. HB	Hot air heater 'asbestos' replacemrnt hose, cl...
L18476-B, 5EH	Heater core, driver side, '46-'48
L18478, 86H	Hot air heater heat exchanger assy
L18478, 96h	Hot air heater heat exchanger with cross-over ...
L18479-B, 5EH	Heater Air Intake Hose Bracket, ea with Black...
L18479, 06H	Bracket, hot air heater support assy., '40-'48
L18480, 5EH	Lisence plate frame, accessory, special equip...
L18480,5EH	
L18481, 11A	Hose clamp, hot water heat/defrost
L18488,HB	Reproduction of asbestos air inlet from heat e...
L18490-B, 06H	Defroster to W/s frame duct
L18496-C, 26H	Heater air inlet control cable
L184H14MH	Mirror head, 4'
L18504	Defroster shell
L18505	Defroster assy
L18515, 06H	Water pump repair kit

L18520, 06H	Elbow, hot air heater register
L18521	Hot water heater air inlet valve assy
L18527-A, 01A	Hotair heater blower assy
L18527-C, 26H	Motor, under seat heater, used
L18527A-6V	Heater motor, 6 volt, 2 sp
L18527harn	Hot air heater blower motor harness
L18532, 96H	Flex air hose, radiator shroud to blower
L18532,96H	Tube, heater blower to heat exchanger
L18544, 06H	Flexible tube assy. (shroud outlet to blower)
L18548	Hot air heater control assy
L18548-B	Hot air heater defrost control cable
L18552-B, 5EH	Spotlight assy - less brackets

Item	Description
L18553-C	Hot air heater defroster flex tube
L18554, 26H	Flexible defroster air hose 22' long
L18555	Defroster hose 20.5' long, driver side
L18556, 8H	Defroster hose
L18557-A	Hot water Heater/defroster fresh air intake hos...
L18557-B, 5EH	Air inlet hose, hot water heater, 3" x 53', LC
L18557-clamp	Hot air inlet hose clamp
L18557, 06H	Heater, hot air radiator pick-up & clamp asse...
L18557clamp	Heater air hose clamp, stainless steel
L18572-A, 7RA	Hot water heater hose clamp
L18573, 5EH	Kit, spotlight bracket, complete, with screws a...
L18591-A, 26H	Heater switch special chrome nut
L18597	Heater/defroster control assy, used
L18598	Heater/defroster control face plate, specify ye...
L18598, 6H	Heater-defroster switch plate, '47-'48
L18662-A, 5EH	Oil filter cartridge and gasket, Genuine OEM F...
L18668-A, 01A	Oil Filter lid gasket
L18801, 01A	Ign. Static Suppressor Condenser
L18805-A, 6H	Radio, '46-'48, used, not reconditioned
L18805-B, 16H	Rebuilt radio assembly, less foot switch, bezel...
L18805-B, 6H	Radio assy less foot switch and trim bezzel
L18805, H	Radio and tuning head, used, condition unkno...
L18805spkr	Re-coned speaker
L18812	Radio antenna lead-in assy
L18812-B,5EH	Antenna lead-in assy , '47-'48
L18812plastic, '42-8	Vacuum antenna plastic base, '42-'48
L18813-A, 5EH	Antenna assembly, '42-'47
L18813-B, 5EH	Vacuum antenna assy, 1947-1948 (exchange)
L18813-C, 5EH	Vacuum antenna assembly, rebuilt, show qual...
L18813, 06H	Antenna, (Cowl) assyl
L18813, 06H-nut	1940 radio antenna top nut & sleeve
L18813, 16H	Antenna, manual, '41
L18813, 96Hh	Antenna, cowl mount assy
L18813nut, 26H	'42-'47 Antenna top nut
L18824-A, 11A	Radio static condenser, generator
L18824, 11A	Radio static supression condensers, set of 5
L18834, 16H	Radio foot control switch & cable assy.
L18842-B, 06H	Radio bezzel, 1940
L18842-B, 16H	Bezel, radio control, 1941 LC
L18842-B, 5EH	Radio bezzel, '46-8 LC
L18842-B,5EH	Radio cover, '46-'48 LC
L18842scale	Radio dial scale, specify year
L18842wonderbar, 26H	Radio wonderbar frame, '42
L18850	Radio vacuum antenna
L18850, 16H	'41 radio antenna (dummy)
L18861. 5EH	Radio control knobs
L18863	Vacuum Antenna control, '42'48

L18897	Fabricate insulator
L18897, 5EH	Antenna insulator
L18898	Antenna insulator to fender gasket
L18911, 5EH	Vacuum antenna control knob
L18912, 5EH	Antenna lead-in grommet, .365" I.D.
L18913, 5EH	Grommet, antenna lead-in seal (vacuum hose...)
L18934-A	Roto-selector radio foot control kit
L18939	Vacuum antenna lower bracket, '41-'48
L18950, H	Ash tray, rear of front seat
L1939 knob se	Radio on-off wheel; tuning wheel, push button;...
L19470,	Brake shoe hold down kit and adjustment cov...
L20000-St	Screw (hex head) 1/4"-20 x 3/8" rear axle brak...
L20173-S	Bumper guard bolt, rear
L20225-S2	hex screw 7/16"-20 x 2" motor mount to block
L20326-S7	Oil pan bolt, '36-'41
L20335-S	Oil pump pick-up assy bolt/lock washer
L20357-S7	Fender bolts 5/16" - 24 X 1" Cadmium plated ...
L20369-S2	Bolt, spare wheel retainer bracket
L20387-S2	Fender and hood hinge (painted body color) b...
L20388-S	Screw 3/8" - 16 X 1" (must trim 1/8" and remo...
L20388-S2	Hex bolt, manifold, 3/8 -16

Item	Description
L20388-S7	Intake manifold bo, cadmium
L20388ss	Intake manifold thick head hex bolt in stainles...
L22228-S2	5/16" xz 1-1/4" drilled end hex bolt
L22495-S2	Shock absorber mtg. bolt,'39-40, 7/16-20X1 1...
L22507-S	Oil pump drive cover bolt
L22518-S	Screw (hex drilled head), '38-'42 oval transmis...
L232	Vent window crank, '46-'48 LZ
L232a	Vent window crank escuteheon
L233	Cowl vent handle
L23350-S7, 26 H	fender skirt to fender rear bracket fastener set...
L23356-S4	Lower molding retainer with 1/4"-20 x 7/16" stud
L234	Hood pull knob
L23441-S	Exhaust system special fine thread carriage b...
L23832, 06H	Horn assy, RH, lessbracket, '40-41
L24433-S7	Radiator support to radiator bolts, hex head 1/...
L24473-S	Vibration damper mounting screw
L25330-S7	Screw, oval head slotted ('48 Phillips), #8 X 1-...
L255272-S7	Fastener, lower staineess moulding w/ 1/4-20 ...
L26414-S2	Outside door handle screw, round head, 12-2...
L27185-B	Screw, slotted round head, 10-32 x 1 5/8"
L2LFspacer	1/2" Spacer for 2LF/2LL battery cases used wi...
L3113222/3	Sill Plates, '41 Custom, rear
L32914-S2	Binding head screw for hood lace, 17 req.
L32993-S13	Screw, stainless, (oval head self tapping) No. ...
L32995- S-13	Screw. oval head, slotted self tapping, set of 8...
L33009-S13	Headlight door screw, "42-'48, oval head slott...
L33169	No. 8 binding head self tapping screws
L33798-S2	Nut, hex, 5/16-24
L33799-S7	Nut, brass, 3/8" -16, exhaust crossover to ma...
L33800-S2	3/8" - 24 lock nut
L33800-S2 special	Optima battery case hold-down special long-r...
L33848-S7	Nut, generator to manifold stud, 9/16-18
L33911	Hex nut 3/8" - 24 and inside star lock washer
L33920-S4	Nut, 1/4"-20
L33923-S	Hand brake adj lock nut
L33927-S	Lock nut, clutch release arm adjusting sleeve
L33971-S	Spring shackle bolt castle nuts
L33a	Convertible Top bow paint, incl drop ship UP...

L34030SS	Hex nut, 3/8" - 24 stainless
L34032-S7	Brake backing plate bolts marsden nuts
L34033-S8	Slotted nut for rear spring u-bolts
L34376-S	Castle nut, spring stud assembly
L34395-S7	Locknut, battery hold-down
L34424-S2	1/2"-20 castle hex nut for strut rod
L34705-S2	Washer, 1/4"
L34707-S2	Washer, flat, 3/8"
L34747-S2	Washer, plain - 3/8"
L34760-S7	Washer, flat 9/16 generator to stud
L34805-S2	Lock washer, 1/4"
L34806-S2	Lockwasher, - 5/16"
L34807	Lockwasher, 3/8' cadmium or raven
L34809-S2	Lockwasher, 1/2' SS
L34809S	Vibration damper lock washer
L34830-S	Lock washer, 9/16' generator to manifold stud
L34846-S2	5/16" lock washer, raven finish
L34867-S13	Washer (finish) - No. 6 (4 required)
L34868-S13	Washer, windshield frame, #8 countersunk, st...
L34903-S7	Lockwasher (shakeproof - No. 10
L34904-S2	Lock Washer, # 12 -internal teeth
L34956	Lockwasher, countersunk shakeproof-5/16"
L350026-S13	Rear window screws, slotted oval head #5-40 ...
L350157-S13	Screw tail lamp lens retainer, '42-8 10-32 x 9/16'
L350295-S7	Inner front motor mount screw (special) 7/16" ...
L350375-S7	Upper door hinge to door hinge screw, oval he...
L350377-S7	"A" pillar lower hinge screw, oval head slotted,...
L350400-S	Cam gear bolt, special 5/16 -24 x 55/64'
L350471-S7	Screw, special fan hub, 5/16'-24x1-5/8'
L350590-S16	Battery hold down bolt cast brass, dull Zinc co...

Item	Description
L350639-S7	Bumper bolt, outer, (oval-Stainless cap) repl...
L350639-S7r	Bumper bolt, 1940, oval head, concave rear, u...
L350645-S	Flywheel bolt (B-6376) Special drilled hex he...
L350652-S7	Spare tire clamp special head bolt
L350667-S2	Special Carriage bolt, rear shock
L350785-S2	Hubcap script speednuts
L351022, 21A	rear shock absorber and stabilizer link stud sp...
L351022, 48	Shock/stabilizer link stud lock nut set (48-351...
L351025-S	Cylinder head nut
L351025-S7	Acorn cyl head nuts, set of 44
L351025-SS	S.S. Cyl hd nut
I351025,ACORN	Cylinder head nut, acorn
L351025/428	Cylinder head nuts & washers, cadmium, set ...
L351025ss	Cyl head stainless acorn nut (44 required)
L351033-S23	Acorn nut, 7/16"-14,, rear bumper bolt,'37
L351035-S	Lock nut, adjusting sleeve, clutch release arm
L351059-S	Strut rod nut, thin slotted 1/2" - 20
L351377-S7	Washers, intake manifold to block, ss, 18
L351377-SS	Intake manifold thin stainless washers, set of 18
L351428	Cylinder head washer, cad. plated
L351428-S	Cyl head nut washer
L351428-SS-P	Cylinder head stud washers, polished stainless
L351428-SS-P:L351428-SS	Cylinder head washer, stainless
L351505-S	Washer, rear axle to brake drum
L3517-K, B	Steering shaft bearing kit
L352551-S	Transmission shift arm Pin
L352559-S	pin, removable, driveshaft coupling
L352581-S	Clutch lever to clutch shaft pin
L352651-S	Woodruf key, vibration damper

L352652-S	Crankshaft timing gear woodruff key
L352693-S	Exhaust manifold studs 2/8-16 & 3/8 -24 x 2" (...)
L352693-SS	Stainless exhaust cross-over studs
L352696-S7	Exhaust manifold studs, left side, pr, 3/8'-16 ...
L352740-S	Generator/intake manifold mounting stud
L353041	Spring lube fitting
L353052-S5	Pipe plug, headless, 1/8', oil supply to lifter tu...
L353055-B	Pipe plug (extended head) dront oil hole in cyli...
L353069-S	Plug, differential filler, recessed 1/2" drive
L353073-S	Plug, front of block 1/4' special
L353075	Ball-3/8" diameter
L353075-S	3/8" ball
L353082-S	Oil relief valve ball, front of valve galley
L353219-S12	Firewall insulator plug button
L353219/20-S2	Firewall Insulator button - 1 - 5/16 ' set of 11-1...
L355055-S7	Door handle screw
L355141-S	Screw & lockwasher assy, oval head # 10-32x...
L355150-S7	Condenser terminal special hex screw
L355243-S2	Door handle screw, '41 & '48 LZ/L
L355269-S7	Lower Stainless body molding fastener. 1/4" - ...
L355271 - S7	Lower stainless molding fastener, 1/4" - 20 x 1...
L355289-S7	Fender skirt molding fastener, '40-'41 LC
L355320-S7	Bolt (special head) - 1/4" x 1/2 (2 reqd.)
L355356-S7	Upper hinge, "A" pillar slotted oval head screw...
L355368-S2	Oil pan screw & lockwasher
L355374-S7	Lower door hinge screw into door, oval head 5...
L355521-S	Spring center bolt (lubricator type)
L355627-S7	Special hex head bolt, front shock, '41-'48
L355628-S7	Bolt 7/16"-14 x 1-1/8" overdrive sypport to ove...
L355657-S7	Bolt, Stop light
L355703-S7	Bolt (special hex head) - 9/16" - 18 x 1-7/8", o...
L355733-S	Flex flywheel hex head drilled bolt 7/16 - 20 - 1"
L35577-ASS, 40	Male door dovetail
L356074-S18	Rear axle hub nut, 5/8'-18, slotted
L356254-S	spacer
L356301-S2	Hood hinge special washer 5/16" x 1 1/8"
L356541-S	Washer, (plain) 29/32" x 1 - (/16" x 1/32" thick ...
L358039-S	plug, 3/8', stainless for cylinder head heater ...
L358052-S7	Plug, expansion, 15/16'

Item	Description
L358111-S8	Fastener, special head, lower stainless mou...
L358111-S8 spring	Fastener, spring type, Lower stainless mouldin...
L358177-	Stainless moulding fastener
L358271-S7	Lower stainless fastener, special head 1/4"-20...
L358308-S28	Upper stainless spring clip, '42-8 spring clip
L35XXXX-S	Expansion plug, 3/4'
L35XXXX-S7	Freeze plug, 3/4'
L3600-vb-125	Repair manual, transmissions, overdrives
L3606-46- VB-24	Service Manual, FLM, 1946-48
L3606-47	Overdrive Manual
L3606-48	'the Overdrive' Borg Warner repair manual
L3606-49	V-12 Overhaul Manual
L3606-50	Chassis Parts Book
L3606-52	Automobile Quarterly Posters, set of 2
L3606-53	Lincoln Owner's Manual - 1946-1948, Specify ...
L3606-54	Lincoln owner's manual, re-print, 1940
L3606-54-B	Owner's manual, 1941
L3606-55	Columbia rear axle instal;lation manual
L3606-56	K.R. Wilson timing fixture instr.
L3606-57	Ford Owner's Hndbk of Repair & Maint

L3606-58	Columbia installation instructions, 1940
L3606-59	Columbia installation instructions, 1941
L3606-60	Radio installation manual
L3606-61	Authenticity Manual. LZOC
L3606-62	'41 LC deluxe catalogue
L3606-63	Authenticity Manual, 1940-1948 Lincoln Conti...
L3606-64	Authenticity Manual, 1936-1942 Lincoln Zephy...
L3606-VB-120	FORD parts book 1928-1948 (Green Book)
L3606-vb-125	Repair manual, transmissions, clutches, and o...
L3606-VB-224	Service Handbook, F L M, '32-'41..VB224
L3606-vb-240	Repair manual, fuel systems
L3606-VB-241	Repair Manual, Generating and Starting Syste...
L3675	Repair & maint. handbook, '32-'55
L37ash tray	"37 ash tray knobs
L37Choke	'37 Choke knob w/insert
L37Cigar	'37 Cigar lighter knob
L37Glove box pull	Glove box pull
L37heater	'37 heater knob w/insert
L37lights	'37 Lights knob
L37throttle	37 throttle knob w/insert
L37Windshield wiper	Windshield wiper knob
L41450-S13	Screw, binding head self tapping - No. 8 x 5/8 "
L5324294, 5EH	Hose, (Hydraulic window regulator) assy-18-3/...
L5601658	Top switch bracket
L5601670, 06H	Insulator, dash assy, '40-'41 LC
L5601670, 5EH	Dash (firewall) insulator
L5601670, 86H	Firewall insulator assy,. '38-'39 LZ
L5601760-C/13018-J, 16H	
L5602138,5EH	Cowl vent handle
L5602386, 16H	Hood side Lincoln Continental script
L5602634/5, 06H	front bodyhinge pillar (A) L or RH
L560300rivets	Rivets (set of 8 short & 2 long)
L5603018,06H	Windshield frame
L560301B, 06H	Windshield, with original markings
L5603115, 06H	Windshield weatherstrip, '40-'48 LC
L5603464, 06H	Bracket, windshield header, visor and dowel, ...
L5603464, 06H:L528333-S13	Screw, oval head, 1/4-20 x 1/2" (6 reqd)
L5603464/5	Convertible windshield header bracket for vis...
L5603465, 06H	Bracket, windshield header, visor and dowel, LH
L5603548, 5EH	Windshield stainless moulding
L5604100/1	sunvisor, pair, LC
L5604352	Radio speaker grille, '42-8 LC
L5604600-A, 5	Cigar lighter assy, '46-8 LC
L5604609	Panel, cigar lighter finish
L5604800-rcvr	Front ash receptacle bracket
L5604800, 5EH	Front Ash Receptacle with chrome face plate ...
L5606010, 06H	Glove box, 1940 LC and LZ except 3 window cp
L5606010, 16H	Glove box, 1941 LC/LZ

Item	Description
L5606010, 26H	Glove box, '42-'48 LC
L5606081, 5EH	Glove compartment lock and keys
L5610130/1,06	Rocker panel assy, left and right
L5610130/126H	Door sill/rocker assy, left and right, '42-'48
L5611150, 06H	Floor pan, right front, 1940 LC
L5611151, 06H	Floor pan, left front, 1940 LC
L5611165, 16H	Center floor pan (transmission cover), '41
L5613202/3, 8el	sill plates, '49-'51 mercury/baby lincoln
L5613202/3,06	Door sill plates, pr.,'40-'48LC
L5613202/3,06:L32916-S2	Screw, binding head sheet metal No. 8x3.8
L5613202/3,06:L32916/95	Sillplate screw set 10 #8 5/8. 8 # 8 3/8

L5613203	Driver side door scuff plate, '40-'48 LC
L5620460	Weatherstrip, door hinge pillar, upper, pr with ...
L5620706	Weatherstrip, LC between door bottom and do...
L5620706-A	Weatherstrip, lower door to sill plate, 44.88" lo...
L5620706-A,06	Weather seal door bottom inner, pr
L5620708-B	Weatherstrip, door bottom-outer-47.5", 2 req'd.
L5620956, 5EH	Moulding, door panel trim,m lower, LC
L5620972-5	Cap, door panel to door, stainless, set of 4
L5621010, 5EH	Moulding, door panel, upper
L5621248	Door opening spring, right hand
L5621248/9	Door opening springs, pr.
L5621249	Door opening spring, left hand
L56212roller	Door opening spring roller assy
L5621400	Window frame assy,L.H., '40-'48 LC
L5621401	Window frame assy, L.H., '40-'48 LC
L5621402	Vent window assy. '41-'48 LC cabriolet
L5621402/3	Vent window/frame assy, L & R
L5621436	Weatherstrip, door window glass, inner & outer
L5621444	Window glass to stainless frame rubber 'U' ch...
L5621448/9, 06H	Weatherstrip-vent window, LC cabriolet, '40-'4...
L5621448/9,26	Vent window weather strip w/o latch cut out, '4...
L5621450/1-A,	Window channel, beaded, convertible, front, p...
L5621451, 06H	Vent window division bar and felt assy
L5621454	Front vent window divider bar, pr R-6A
L5621454, 06H	Weatherstrip, vent window rear frame, LC cab...
L5621463	Left window channel & Bracket Assy
L5621510	Weatherstrip, window glass bottom to channel
L5621702, 26H	Window glass run channel
L5621812 "tongue"	'41-'48 LC door latch "striker
L5621812, 06	Door latch, RH, '40
L5621812, 06H	Door lock Assembly, '40
L5621812, 16H	Door lock assy, R.H., '4
L5621813,16H	Door lock assy. L.H, '41-'48
L5621830	Door latch control shaft, '42-8 LC
L5621830. 06H	Door latch control, LH, '40 LZ
L5621831	Door latch control shaft, '42-8, LH
L5621852	Door check strap
L5621999	Door lock button ferrule
L5622400	Door button, outside, '41-'48
L5622400, 06H	Door handle, outside, '40
L5622400hdl	Door handle, '47-8, LF/RR
L5622401	Door handle, RF/LR, '47-8
L5622626.5EH	Door pull end escutcheon
L5622626.scrw	Door pull strap end screws set
L5622800	Hinge set, LC, door post pieces only
L5622800-pin	Hinge pin-(with oiling gruve
L5622800, 06H	Hinge, door, upper right
L5622800/1	Door hinge, upper, door pillar side
L5622800/11	Door hinge set, with pins
I5622800/1screws	Hinges screw set, LC
L5622800:L5622800-A,06H	Hinge, door.RH, upper, door post piece
L5622800:L5622811, 06H	Hinge, door, upper
L5622801, 06H	Left upper hinge, '40-'48 LC
L5622810-P	Door hinge, lower RH, door post piece
L5622810, 06H	Hinge, door, lower right
L5622811-06H	Door hinge, left, lower, '40-'48 LC
L5622811-pin	LC Door Hinge Pins , set of 4

Item	Description
L5623030-ret	Retainer for door bottom retainer
L5623030,06H	Bumper, door bottomto sill plate

L5623200-A, 5EH	Door window regulator assy-hydraulic
L5623200, 06H	Window regulator assy, '40-'41 LC, RH
L5623200, cyl	Hydraulic window lift cylinder, new
L5623200,spring	
L5623201, 06H	Window regulator assy, L.H., '40-'41LC
L5623342	Door window regulator handle
L56233500	Door check arm assembly assy
L5623410-Bknob, 5EH	Vent window crank knob, LC '46-'48
L5623410,26H	Vent window crank, used
L5623435	Vent window regulator Left LZ (use for RH LC ...
L5623435/6	Vent window transmission assy, left and right
L5623436	Vent window sector gear repair kit
L5623456	Vent window crank coupling
L5623456/68	Vent window crank shaft assembly
L5623500, 06H	Door check assy, reproduction
L5624212, 26H	Cylinder-door vacuum-assy-RH
L5624213	Cylinder-door vacuum-assy-LH
L5624279	Hydraulic pump hose
L562582/3-A	"B" pillar aluminum casting braces L & R
L5627846/7	Quarter Panel Repair, L&R, '40-'48LC
L5627846/7,06	Quarter panel repair, '40-'41 LC
L5628110, 06H	Pad, top slat iron to inner fender, pair with eig...
L5628298/9	Pad, convertable top post to quarter panel, ste...
L5629038-A, 26H	Moulding, lower stainless, rocker, Passenger ...
L5629039-A, 2	Moulding, stainless Left rocker moulding, '41-'...
L5630300guide	Conv top iron guide assy, pr
L5630700	Ash-tray receptacle, rear, 40-8 LC
L5630710, 5EH	Ash receptacle knob, maroon
L5633400	Door operating button, outside, '41-'48
L5640110	Rear deck lid, '40-'48 LC
L5642/44	Rear deck lid hinge/clamps pad set '40-48 LC
L564200/1, 06	Arm, luggage compartment support
L564200/1, 26	Trunk lid hingedsupports, LC
L564200/1,26	Trunk lid support, '42-'48 LC
L56427-4470-	Deck lid hinge, clamp, hook set, restored
L5642770/6	Rear deck hinge pad set
L5643200, 06H	Rear deck door lock assy, '40-'48 LC
L5643200,06H	Rear deck door latch & lock assy.
L5643200,06H:L28918-S13	Screw, oval head,10-32 x3/8", SS, set of 4
L5643505,06H	Rear deck lock cylinder assembly, '40-'48 LC ...
L5643505pad	Deck lid cylinder lock pad
L5643724-A,06	Weatherstrip, rear deck door, LC-10'; LZcp- 1...
L5644200, 26H	Trunk lid supports, pr., '41-'48
L5644200/1,06	Trunk lid support, '40-'41 LC
L5644470, 06H	Clamp, rear deck lid, RH
L5644471-hook	Deck lid clamp hook (on body)
L5644471, 06H	Clamp, LC rear deck lid LH
L5644492/4	Deck lid latch/hinge pad set
L5644494, 06H	Deck lid clamps pads on body
L5650300rivet wave	Convertible top "wave" washers, set of 10
L5650300rivets	Rivet set, convertable top iron rivets replacem...
L5650504, 06H	Bumper, Convertible top pillar to quarter panel
L5650504, 26H	Convertible top pillar-t0-quarter panel
L5650504chrome	Chrome top pillar receiver
L5650570	Conv. top switch control rod and knob, w/ das...
L5650598	Convertible top hydraulic cylinder
L5650598, 06H	Conv. top vacuum cyl & lock assy
L5650598,5EH	Convertible top cylinder, '46-8
L5650598/9 rpr	Replacement vacuum piston 7 rod and rod se...
L5650600, 06H	Convertible top Lift cyl, vacuum
L5650832/3	Bracket, top front rail to side rail, RorL

L5650832/3:L20324-S7
 L5650833, 06H
 L5651100
 L5651100-S
 L5651100-s instalation

Screw set:34805-S2 (4), etc
 Bracket, top front bow to side rail, LH
 Convertible top front oak rail
 Convertible top front (header) bow metal stiffe...
 Convertible top front bow with stiffener installed

Item	Description
L5651128, 06H	Front top bow weatherseal, 5' trim to fit
L5651150/1, 06H	Top frame to window weatherstrip retainer, R ...
L5651272, 06H	Conv. top front bow
L5651272metal	Conv top #1 stiffener
L5651280	Convertible. top rear bow, (#3)
L5652500window	Convertible rear curtain window, '41-'48
L5653167, 16H	Rectangular pad on top of inner fender for top ...
L5654486-B, 06H	Container, (dust hood) assembly- Black Top
L5654710-mole	Conv top to window weatherstrip moleskin cov...
L5654710/1	Weather seal, window frame to front pillar/ top...
L5654710/11	Weatherstrip, side top frame to window, pr
L5660050	Front seat cushion
L5660150/51, 16H	1941 LC front seat back left and right, untrim...
L5661076, 26H	Bracket, front seat back inner hinge
L5661752-A, 2	Seat adjusting handle
L5664406/7, 26H	Front seat back cushions L & R
L5703014	Windshield retaining frame, '40-'48 LC
L5703088	Wndshield outside finish moulding
L5704311,5EH	Panel, dash instrument and glove box
L5711150, 16H	Floor pan, right front, '41 LC
L5711150/1	Floor pans, pr (specify '38/9,'40/1, open or clo...
L5711151, 16H	Floor pan, left, '41 LC
L5720530	Weatherstrip, door opening, per foot
L5720530, 06H	Weatherstrip, door opening, LC cp window fra...
L5720530/1	Weatherstrip, door window frame to body kit, '...
L5720531, 06H	Upper door seal set, '40-'48 LC cpe
L57209742-5	Door pannel to door top stainless trim set
L5721401-A	Glass (door) and channel assy LH-hydraulic lif...
L5721410, 5EH	Door window glass L or R, '42-'48 LC Cp
L5721448/9-A	weatherstrip, vent window, L & R, LC cp w/o l...
L5721448/9-B	Weatherstrip-door vent window-assy with locki...
L5721449	Weatherstrip, vent window, LH
L5721450	Vent window division bar weather-strip, pr.
L5721462	Window glass bottom chammel,R.H.
L5721463	Window glass bottom channel
L5721534	Window glass channel, LC coupe, 96" piece, ...
L5722296/7	Vent window weatherstrip vertical section, L& R
L5722296/7strp	Weatherstrip, SS beaded window glass to doo...
L5723942/3	Door panels, pr. '40-'48 LC
L5723942SS	Door panel stainless trim, upper and Lower, s...
L5729056	Weatherstrip, quarter and door opening upper...
L5729732/3	Weatherstrip, rear fixed window and vent wind...
L5730238	weatherstrip, rear vent division bar, LC
L5730248	Vent window, left rear weatherstrip
L5730249	Weatherstrip, left rear vent, LC
L5742006, 06 H	LC cp Rear glass B-D 20-8
L5742084,06H	Weatherstrip, rear window, LC cp- Bin D-15-6
L5742430, 06H	Moulding, back window outside finish
L5751721, 06H	Roof drip rail moulding, LH
L5752101-8, 06 H	Supports for headliner (each is marked 1 thro...
L5760050-B, 16 H	Front seat cushion assy, '41 LC
L6065-ss-acorn	Acorn cylinder head nuts, polished stainless
L62231-S	Rivet, fender skirt receiver, flat countersunk h...
L63547-S3	female dovetail oval gead tubular rivet- 3/16" x...

L650832, 06H	Bracket, top front bow to side rail, RH
L6519-I, 16H	Three Carburetor Manifold
L6534-A, B3A	Two piece (rotocap) spring retainer
L6740, 26H	Oil level float guage
L7001600, 96H	Dash assy, '39
L7001670, 96H	Firewall Insulator, '39 LZ cp/ca
L7001670, 96H:L353220-S13	Firewall insulator pin (1) req'd
L7001670, 96H:L353329-S4	Firewall insulator Plug button
L7002330-A,96	Cowl vent gasket
L7002386,96H	Hood medalion, R.H., '39
L7002387,96H	Hood medalion, L.H.,'39
L700600, 86H	Center console '38-9
L7006066, 06H	Bumper, glove compartment door, upper
L7006066,91A	Bumper, glove compartment door, pair

Item	Description
L700731,48	Wiring harness firewall grommet
L700737-end, 86H	Machined 3.8 -24 imitation bolt end
L700737, 06H	Bolt, battery clamp assy, rear, '40-'48
L700737, 86H	Battery hold-down bolt, rear, 3/8' -24, lead coa...
L700737, 86H (HI BATTERY	Bolt, Special, rear battery hold down clamp. '1...
L700737, 86H Special nut	Special extended battery clamp hold-down nut...
L7011136, 91A	Master Cylinder. cover plate
L7011150, 96H	Floor pan , right, 1939
L7011151, 96 H	Floor pan, left. '39 LZ
L701577-B, 86H	Gear shift grommet
L701616, HB	Headlight switch with shaft and chromr nut
L701671-S	Glove box door bumpers, pr.
L701671, HB	Glove box door bumper, '36,'37
L701672, HB	Glove box, right, 1937 LZ
L701673, 86H	Glove box, left, '38/'39
L701673, HB	Glove box, left, 1937 LZ
L701679, HB	Spring, glove box door
L70196	Round hood to cowl bumper, pr
L701980	Weather seal door panel to sill plate, '37-'39
L701980, HB	Weatherstrip, Door Bottom, per foot
L7020456/7, 96H	Weatherstrip, door hinge pillars, '38-LZ
L7021400/1, 96H	Window glass and channel, less glass, requir...
L7022008-C	Door lock striker (ford repro for parts)
L7022600-A, 96H	Door handle, inside, std trim
L7022840	Hinge pin, oversize, repair, hardened
L702302, 48	Lock Cylinder, 1936-1940 with 2 keys
L702340	Door latch striker plate
L702340, 06H	Door lock striker, 1940 LC
L7023402-GR,	Vent window Gear kit, '41-48
L702350, 06H	Door handle, right front 1941, 1947-8 LZ
L702350, HB	Door handle, outside, '37
L7023501, B	Door check arm kit
L702400, 06H	Door handle, inside
L702475-A, 48	Door hinge pin
L702574-RK	Female dovetail repair kit
L702610 A and B	Door bumpers (2 each of 2 types used)
L702650/51, 9L-1L	Door sill scuff plates, '49-'51 "baby" Lincoln
L702650/51, H	Door sill plates, 1936 Coupe, pr.
L702650/51, HB	Plate-door scuff (door sill plates), pair, '37 cou...
L702780, HB	Handle, window regulator
L703356-K	Window felt staples
L703724/5, HB	Lower stainless mouldings, left & right, '37-8
L704196, 86H	Deck lid lock and keys assembly, and 2 keys
L7043500-R, 01A	Beck handle lock set w/key
L705790, 86H	Plate, robe carrier cap anchor

L7062810-A96H	Robe rail end cap assy.
L706902, 86H	Lock assembly, rear deck door
L7090, HB	Universal joint, original needle bearing type, '3...
L7121984,06H	Lock cylinder assy, door, '41-8
L71320, 26H	Glove box. '42-'48
L71320, H	Glove box assy
L715444, 78	Frame, rear window glass, inside, 1940
L715446, 78	Rear window frame, outside, chromr plated
L72009-S	Cotter pin, driveshaft coupling pin, 3/32' X 5/8'
L72010-F	Cotter pin 1/8' x5/8'
L72025-s	Cotter pin
L72053-S	Cotter pin
L72090, H	Weatherstrip, windshield
L72132/3, 16H	Door sill scuff plates, ' 41 LZ cp/conv
L7213200/1,26	Door scuff plate, '42-'48LZcp
L7213202/3, 06H	Door sill scuff plates, pair
L7213202/3, 16H	Door entrance scuff plates, Pr.,'41 LZ cp
L7213202/3,16H	Door sill plates, pr, '41 LZcp
L7213202/306H	Door sill plates, '40 LZ
L721942/3	Weatherstrip, door opening header, '36-9 cp
L7220532, 16H	Weatherstrip-door opening header LZ cp app...
L7220545,16H	Weatherstrip, between door panel bottom and...
L7220706, 26H	Weatherstrip, A pillar, door lock side, door bot...

Item	Description
L7220936,96H	Moulding, door, lower, L. F., '39 sedan
L7220937,96H	Moulding, sedan door, lower left
L7221462	Window glass channel, per foot
L7221463, 86H	Channel-door glass& retainer-LH
L7221555. 06H	Glass door run
L7222296/7	Vent window vertical div bar seal, '40-'48 LZ
L7222297,06H	Division bar, vent window, left, '40-'48 LZ
L7229038,16H	Quarter panel lower ss trim, '41 cp, RH
L7242701, 06H	Hingem deck lid, left, '40-'48 LZ
L7242770/6	Trunk hinge pad set, 40-8 LZ
L7243724-8	Trunk weatherstrip, '40-'48 LZ
L7243724-A, 06H	Weatherstrip, luggage compartment top & sid...
L725546, HB	Weatherstrip, rrear deck door
L7261062adj	Seat back adjusting stop bolt
L7261114-A, 16H	Screw-front seat back hinge stop adjusting
L7261114-A, 26H	Screw, adjusting, front seat back hinge stop
L7301616-support	Battery tray and support kit
L7301616,06H	Battery support assy., '40-'48
L7301616,06H:L700732,06H	Bracket, battery tray at firewall
L7301670	Firewall insulator assy
L7301698	Steering column sponge seal cover
L7302133, 06	Cowl vent cover & deflector
L7303115-A,06	Windshield weatherstrip, '40-'48 LZ
L7303115,06H	Windshield weatherstrip, '40 Lincoln Zephyr s...
L7304370	Radio blanking plate, 1940 LZ
L7304370-A	Radio delete plate, with 7304418 script
L7304600-A, 5EH	Cigarette lighter assembly, front
L7304600-B	Rear cigar lighter housing and socket assembly
L7304600-B, 5EH	Lighter assy, '46-'48 LC
L7304600RP	Cigar lighter socket, replacement
L73046105EH	Lighter assy, rear, '46-8
L7304620	Lighter socket and wire
L7304620-B	Socket, cigar lighter and wire assy
L7304800-B-40	Ash tray face plate, '40 LC
L7304826,16H	Ash receptacle, front, '41 LC
L7306034rub	Glove box door bumper, '40-48

L73060box	Glove compartment, specify yr.
L7311150/1,16	Floor pans, pr., '41
L7312115, 16H	Transmission cover
L7312115,06H	Transmission cover
L7312120, 16H	Transmission cover, rear
L7312124	Transmission cover gasket
L7313202/3,06	Scuff plates, '40 LZ 4-dr
L73200pin	Hinge pin
L7320456-B, 16H	Weatherstrip used on door hinge side of the d...
L7320456, 16H	Weatherstrip on door at hinge pillars, 3'
L7320496-B	Weatherstrip, door opening, lock side
L7320498	Weatherstrip, lock pillar lower(on door), LZ cp
L7320532-B16H	Weatherstrip, front and rear door header, 25' r...
L7320546, 06H	Door weatherstrip, lock side 3'
L7321120-A, 06H	Bumper, door opening, LZ '40-'48 cp
L7321120, 26H	Bumper, hood to cowl13/16 .59' high
L7321248, 16H	Door opening spring, RH
L7321249, 16H	Door opening spring, LH
L7321438/9	Weatherstrip, Chrome bead whisker
L7321448/9	Vent window w/s, '40-'48 LZ, L & R
L7321450	Weatherstrip, front vent window division bar (u...
L7321498, 26H	Door window glass run, hinge side (2 req'd), 36"
L7321812, 06H	Door Lock assembly, right hand
L7321812,16H	Door latch assy, RH, '41 LZ
L7321813,16H	Door latch assy. LH, '41 LZ
L7321850	Lock knob, '46-8
L7321984, 06H	Door lock with key
L7321984, 16H	Door lock cylinder, NOS, Lincoln Continental, '...
L7322008,06H	Door lock striker, '40
L7322008,06H:L350256-S13	Screw, special head for door lock striker plate,...
L7322026, 06H	Pad, door lock striker plate
L7322078-A,16	Door lock striker assy, RH, '41-8 LZ

Item	Description
L7322078-B,16	Door lock striker assy, LH, '41-8 LC
L7322079-A, 16H	Door lock striker, LH door, '41 LZ
L7322079-B,16	Door lock striker, LH, '41-8 LC
L7322400, 16H	Door handle, RF & LR, '41, '48 LZ
L7322400,06H	Door handle, outside, 1940
L7322401, 16H	Door handle, LF & RR, '41, '48 LZ
L7322600,06H	Door handle, inside, '39-'40
L7322606	Door pull cord
L7322606, 16H	Door pull handle cord chain and oval head scr...
L7322613, 16H	Door pull handle bracket
L7322614,5EH	Button, inside door opening, '46-'48
L7322614,8H	Door handle, driver or RR, '47 L
L7322618, 16H	Escutcheon, inside door lock push button
L7322620-A,06	Window crank escutcheon, '40-'41
L7322620-A,16	Window crank escutcheon, 1941
L7322620-B, 1	Escutcheon, window regulator handle
L7322646, 16H	Spring, inside door button, '41-'48
L7322820-35	Door hinge set of 2 upper, 2 lower
L7323000	Dovetail assembly, female
L7323200	Window lift hydraulic cylinder
L7323342-A, 0	Handle, front door window regulator
L7323342-B, 06H	Door window regulator
L7323342-B,16	Handle, window reg., custom trim
L7323342,06H	Window crank, '39-41
L7323410-B,16	Handle, vent window reg., custom trims
L7323420,26H	Vent window crank ecsutcheon
L7323436	Gear, vent window shaft

L7323456	Vent window shaft
L7323464, 5EH	Vent window escutcheon assy, used with usa...
L7323468	Vent crank coupling retainer
L7323500, 06H	Arm, door check assy.
L7324156-A, 26H	Window lift valve, RH
L7324156-B, 26H	Vacuum window lift control valve
L7324206, 5EH	Window switch, 1946
L7324206, 6H	Window Switch, '47-'48
L7324207	Switch Plate, (1 sw), inner, cad plated
L7324208	Hydraulic motor and pump assy.
L7324208 arm seal	Hydro pump armature seal
L7324208 gears seal	Hydraulic pump gears seal
L7324230	Window 2-switch escutcheon plate
L7324235	Switch plate (2 sw), inner, cad plated
L7324258	Spring conduit, hydraulic window door pillar to...
L7324258-grmt	Brass ferrel for hyd window SS conduits
L7324258r	spring conduit, hydraulic window door-to-hing...
L7324277-A?	Vacuum window lift plate and control rod
L7324279, 5EH	Hose (hydraulic pump to dash) assy
L7324294, 5EH	Hydraulic window regulator hose
L7325/27r	Shift Rod End Repair Kit
L7325556, 96H	Moulding, right rear door lower outside
L7325557, 96H	Moulding, L.R door outer, lower
L732650/1HB	Sill plates, front pr. '37 4-dr
L732903-A	Molding, LH lower, rustless steel, '42-'48 LZ
L732903-A,26H	Lower body stainless, '43-'48 Lincoln
L7329038-A	Molding (body lower) RH, '42-'48 LZ
L7329038-A, 26H	Molding, lower stainless RH, '42-8 LZ
L7329038, 96H	Moulding, right quarter lower
L7329039-A	Molding, lower, rustless steel, '42-'48 LZ
L7329039-A, 26H	Lower body stainless moulding, '42-'48 Lincoln
L7329039, 96H	Moulding, left quarter, lower
L7329039,06H	Moulding, stainless, left quarter(used)
L7329058,06H	Moulding, stainless, right quarter
L7329904/5-B	weatherstrip, quarter windows, L & R
L7342084-B,06	Back window weatherstrip, 40-48 LZ
L734250/1,HB	Door sill plates, pr. rear '37 4-door
L7343244, 26H	Trunk lock latch tongue
L7343249, 26H	Trunk lock tongue retainer
L7343505, 26H	Deck lid lock with key
L7343720,06H	Weatherstrip, luggage compartment, top and ...

Item	Description
L7343728	Weatherstrip, rear deck
L7343728-A, 06H	Luggage compartment door bottom, 27.88"
L7345852, 06H	Trunk lid supports, pr., '40-'46
L7345852, 7H	Deck lid supports, pr., '47-'48
L7347074, 26H	Spare wheel clamp, '42-8 Lincoln
L73510, H	Window regulator handle and knob assy, NOS
L7353374	Hydraulic sump gasket
L7353376	HYDRAULIC PUMP RESERVOIR, RESTORED
L7353376 fil lid	Hydraulic pump reservoir filler lid
L7353378	Hyd. pump reservoir bail
L7353380, 5EH	Hydraulic pump solenoid switch
L7353382	Hydraulic pump cushion mounts, set of 3
L7353384	Hydraulic pump top bracket
L7361700/1, 06H	Front seat guides, pr., 1940
L73871-S	Hand brake equalizer/clevis pin
L73881-S	Clutch release shaft lever pin
L73a1	Carburetor gasket, 4-bolt
L74113-S	Expansion freeze plug, '36-'41 engine block

L74119-S	Expansion plug, 1-1/8'
L74132145/16/17	Door sill scuff plates, L &R front and rear doors
L74175	Starter drive woodruff key
L747036, 86H	Weatherstrip, front top bow to windshield
L747570, 86H	Back window glass weatherstrip
L748303, 86H	Visor support bracket
L748303, 86H:L355361-S13	Set screw (special headless) - 1/4" -28 x 13/32...
L7503115-A, 06H	Windshield weatherstrip, '40-'48 LZ
L7544860, 06H	deck lid support, pr.'40-'46
L75a	Accelerator linkage transfer shaft
L7601670, 5EH	Firewall Insulator, 1940-1948 Lincoln Zephyr (...)
L76026201,06H	Bumper, door pillar, upper front
L7602626/,06H	Weatherstrip/bumper, front body pillar, upper
L7602638/9, 06H	door hinge post to floor brace, L & R
L760511522-7651141	'42-'48 Lincoln/Zephyr conv. top weatherstrip r...
L7620546-B, 0	weatherstrip, door opening, lock side
L7621436,06H	Window whisker moulding w/chrome bead, 3' l...
L7621450/1	Vent window weatherstrip, pr
L7621454, 06H	
L7628272/3	Weatherstrip, quarter vent/window L&R
L7628272/3,06	Rubber w/s pad, convertible top quarter panel...
L7628278/9, 06H	Conv top weather strip retainer, rear. R & L
L7630732	cigar lighter escutcheon, rear, LC
L764792-BG-mole	Moleskin for convertible top to window frame ...
L764792-BG, 86H	Weatherstrip, window to top and windshield p...
L765000-rivet	Convertible top slat machine screw rivets rivet...
L7650598	Lincoln z top cyl
L7650642-B, 16H	Control knob, convertible top, 1941 LC29.8
L7650738, 16H	Top control switch, '41-'42
L7650738, 5EH	Valve, hydraulic top operating
L7650738,16H	Conv. top switch with bezzel, '41/2
L7651100, 06H	Convertible top front wood bow, Lincoln Zephyr...
L7651100, 26H	Convertible top front bow
L7651150/51-A	Lincoln Zephyr convertible top weather strip s...
L7651254/5, 06H	Bumper, convertible roof rail-to-top of quarter ...
L7651254/5, 26H	Convertible top pillar-to-quarter panel bumper,...
L7651280, 06H	Convertible top bow No. 3
L7653028, 06H	Screw, conv top hold-down Stainless
L7653200	Convertible rear window glass, laminated 1/8...
L7653220, 11A	Back window frame, Outside, chrome plated
L7653224, 11A	Rear window frame, inside, '41-'48
L7653382	Top/window Hyd. Pump mounts, set of 3
L76590, H	Weatherstrip, right quarter window, '36-'41 sdn
L76591, H	Weatherstrip,left rear window, '36-'40 sdn
L76720, H	Weatherstrip, back window
L76750598, 5EH	Hydraulic cylinder, conv. top, '46-'48 Lincoln
L7720532-B	Weatherstrip, door opening header 16' required
L7721534, 5EH	Side window glass runs, 5 ', pair
L7729904/5	Weatherstrip, quarter window, clb cp'40-8
L77352	Rear deck Lock cyl grommet

Item	Description
L7742700,06H	Deck lid hinge, left, '40-'41 LZ
L80290-C, H	Cover, clutch and brake pedals, 1941-1948
L8503/4 brgs	Convert pump to modern permantly lubricated
L88061-S	Carburetor mounting studs
L88411-S7	Carburetor to manifold mounting studs, 5/16-1...
L9030r, 11C	Fuel filler cap 36-'39, repro
L90a	Refundable core charge - water pump
L95397-S23	Fastener button, top boot to bodybelt rail and ...
L98a	Oil filler tube

Landau	Battery spacer for optima
Lbat spcr	Battery charger-Sure-Charger 6 Volt
Lbatchgr	'40 LC bumper bolts set
Lbolts	Interior body harness
LC40411	Hot air heater wires
LC40461	Trunk harness, cabriolet
LC40482	Cowl harness
LC41411	Parking light buckets, pr.
LC41412	Taillight harness
LC41413	Headlight harness
LC41483	Stop light & liscence plate w/conduit
LC41485A	Interior body harness, coupe/dome light, cig lt....
LC41486	Carpet grommet, h/l dimmer/radio station cha...
Lcarpetgrmt	Fresh air intake hose clamp
LCH-10	Authenticity Manual 1940-1949 Lincoln Contin...
LCOC Authenticity	Complete wiring, '46-'48 LC
LCwiring	Decals, engine or glovebox door ('41-'48
Ldecals	Deck lid 6 pc hardware set
LDeckLidhardwareset	Door sills, Lincoln Capri, '52-'55
Ldoorsill'54	Stainless trim set for top of LC Cabriolet driver...
LdoortopSS	Drive screw
LDrivescrew	Engrave operating studs, paint black and polis...
Lengraving	Stainless steel exhaust system,complete
Lexhaust	Laser cut Ford logo/ lincoln part #
Lfan belt	Special fender washers, hex bolts & lock was...
LFender kit	Fender bolts, thick head 5/16" x 1", raven finis...
LFender kit:L20357-S2	Fender washers, special
LFender kit:L351404-S2	Firewall insulator assy, 1940-1948 Lincoln Co...
Lfirewall	Frame Outriggers front, intermediate L or R \$...
Lframe outriggers	
LFreeze plug	
Lheat treat	Heat treet
Lhoodlace	Hoodlace
Lhotair-15	Hot air heater 'S' pipe w/ 2 bends blower to he...
Lhotair-19	Hot air heater flex hose, scoop to blower
Lhotair-21	Hot air heaterfresh air heater pre-heat scoop
Lhydro-WC-6V LZ	Window Cylinder, LZ quarter window
LHydro WC-6V long	Window cylinder, LC
Li7765, 06H	Bolt, front bumper impact bar spacer center 7/...
Ligncoil-r	Rebuild ignition coil
LINC-38-39	Firewall insulator assy
LINC-40-41-C	Firewall Insulator, '40-'41 LC
Lincoln misc.	Miscellaneous new Lincoln parts
Linst	'40-'41 Inst & Speedo Glass gaskets
Ljewels	Hi-beam/turn signal jewels
LJRM-1	On-off & volume control Knob
LJRM-10	Defroster knob
LJRM-100	Tuning knob. '37
LJRM-11	Rheostat knob
LJRM-114	On-off & volume control, '46-8
LJRM-115	Tone control, '46-8
LJRM-116	Station selector bar
LJRM-117	Dial control, '46-8
LJRM-118	Antenna Base
LJRM-119	Fresh air knob
LJRM-12	Cowl vent knob
LJRM-120	Heater sw knob (exchange), '46-8
LJRM-122	Rheostat knob
LJRM-123	Defroster knob, '46-8

Item

Description

LJRM-124	Cowl vent knob, '46-8
LJRM-125	W/S wiper knob
LJRM-126	Starter switch knob
LJRM-127	Hood pull knob, '46-8
LJRM-128	Overdrive knob
LJRM-129	Vacuum antenna knob,'46-8
LJRM-13	Headlight switch Knob, '40 LZ
LJRM-130	Vent window crank knob
LJRM-131	Vent crank ring
LJRM-132	Window crank Knob
LJRM-133	Window crank ring
LJRM-134	Door lock push button, '46-8
LJRM-135	Door push button ring
LJRM-136	Door lock button, '46-8
LJRM-14	Windshield wiper control knob, '40 LC, maroon
LJRM-140	Turn signal handle, '46-8
LJRM-141	Shift knob, '46-8
LJRM-142	Rear ash tray knob, '46-8
LJRM-143	Cigarette lighter knob
LJRM-15	Starter switch button
LJRM-150	Radio dial scale, '47-8
Ljrm-151	Convertible top control knob
LJRM-16	Choke knob
LJRM-17	Throttle knob
LJRM-18	Hood pull knob
LJRM-19	Ash tray handle
LJRM-19.1	Blanking knob, '41 LC
LJRM-2	Tone control knob
LJRM-212	Heater console plate
LJRM-23	Vent window crank knob
LJRM-24	Vent window crank ring
LJRM-25	Window crank knob
LJRM-27	Push button
LJRM-28	Push button ring
LJRM-29	Door lock knob, '40, ivory
LJRM-3	Radio station selector
LJRM-30	Turn signal handle
LJRM-31	Shift lever knob
LJRM-32	Horn button
LJRM-33	Horn button ring
LJRM-34	Rear ash tray knob
LJRM-35	Cigar lighter knob, ivory, '41
LJRM-4	Radio dial control
LJRM-43	heater switch knob
LJRM-46	wiper knob
LJRM-5	Radio face plate
LJRM-51	starter switch knob
LJRM-52	choke knob
LJRM-53	throttle knob
LJRM-58	Window crank knob, 1940 Lz & LC
LJRM-6	Radio dial plate
LJRM-60	door lock knob
LJRM-66	cigar lighter knob
LJRM-68	Radio on-off & volume control knob plastic, '4...
LJRM-69	Radio tone control, '46-8
LJRM-7	Heater pull knob
LJRM-70	Radio station selector bar, '46-'48
LJRM-71	Radio dial control plastic
LJRM-72	Antenna base
LJRM-73	Radio on-off-vol, '41
LJRM-74	Tone control, '41

LJRM-75	Station selector
LJRM-76	Heater console face plate
LJRM-77	Radio face plate
LJRM-78	Radio dial plate
LJRM-79	Cowl ventilator knob
LJRM-80	Heater Switch Knob
LJRM-82	Hood release knob, '46-'48

Item	Description
LJRM-83	Overdrive control knob, '46-'48
LJRM-85	Vent window crank knob
LJRM-86	Vent window crank ring
LJRM-9	Vacuum antenna knob
LJRM-90	Door push button ring
LJRM-91	Door lock knob, '46-'48
LJRM-95	Turn signal handle repair, '46-'48
LJRM-96	Shift lever knob, '46-'48
LJRM-98	Cigar lighter knob,
LJRM-99	Radio on-off knob, '37 LZ
Lk-26	8EL-6600 rebuild kit, Melling K-26
Lknobs38	Knobs, 1938 all
Lknobs40	All dash and window control knobs
LL040481	Engine harness, '40-8
LL042486	Wiring harness, O.D. relat - coil
LL14382-C, 16	Overdrive wiring harness
LI20326-S7	Oil pan special screws
LL40403	Headlight bucket harness, pr.
LL40412	Horn harness
LL40461	Hot air heater harness, 1940 LZ/LC
LL40481	Engine harness
LL40483	Horn harness
LL40484	Engine harness
LL41411	Overdrive Harness-(early)
LL41421	Overdrive harness
LL41422	Convertible top harness
LL41423	Overdrive relay-to-coil harness
LL41482	Headlight buckets, pr.
LL41484	Body harness
LL41486	Interior body harness
LL41487	Steering column wire
LL42486	Harness, overdrive relay to coil, late'42 to'48
LL42487	Horn harness, 48LC
LL5711215'06H	Lincoln Contiental repro trunk floor
Llicense	License bracket pad, rear, '40-8 LZ
Llock service	Re-key locks
LLsockets	Dash instrument light sockets
LLZ40402	Headlight harness, '40
Lmachining	Machine/repair customer's part
Lmachining:Lbat svrc	Saw cut top off of customer furnished battery, ...
Lmisc fasteners	Misc. fasteners
Lmudpan	Engine mud pans
LO2108, 96H	Hand brake strut and sleeve assy., RH.
Lo2140rpr	Master cylinder repair kit
LP 51-C	Trunk seal, Lincoln
LPAINT	'Lincoln Green' engine paint, qt. ORM D cons...
Lpaint-Argent	Ford Argent paint, 13 oz aerosol
Lpaint-Htr/defroster	Heater/defroster paint
LPAINT-trim	Lincoln trim red
LPaint eng spray	Lincoln engine green spray can
Lpaint rustoleum "cadmiub"	Rustoleum cad High performanceAi heat coati...
Lpatent	Patent plate 1938-40, '41-8, specify year

Lplastic	Plating
Lplating	Automobile Quarterly Posters, set of three 24'...
Lposters	Price list
Lprice list	Columbia rear axle parts list
Lpub-1	Service manual/Lots of detail, VB-224
Lpub-2	1936 KR Wilson catalogue
Lpub-4	Window glass chrome bead wisker mldg.
LR-10	Hood to cowl bumpers, pr.
LR-27	Lower door panel to sill plate weather sead
LR-4	Gas filler lid bumpers, pr.
LR-53	Rear quarter window set, '40-'48 LC Cp
LR-55	Rear window seal, LC
LR-56	Accelerator pedal carpet rubber sealing plate
LR-69	Window glass channel, coupe
LR-6AA	Glove box door bumpers, pr.
LR-75	

Item	Description
LR-8	Door bottom to sill bumpers, pr.
Lrestore S.S.	
LRIW0399	Wiring Harnesses, complete, less spark plug ...
LRIW0408	Wiring harnesses
LRIW877	Engine Harness, '46-8 LC
LRIW917	Overdrive to condensers harness, 42-48 LC
Lruggrommet
Lservices	Lincoln price list 1936-48
Lservices:Bore cyl	Bore HV-12 block
Lservices:Electroplate	Electroplate and polish
Lservices:L carb rbld	Carb cores for rebuild or parts:1, Correct Zeph...
Lservices:L06251-R	Camshaft Regrind
Lservices:L06251-W	Build-up worn camshaft lobe
Lservices:L06502-R	Valve lifter body radius grind, micro finish
Lservices:L06508-S	Hydraulic Lifter Rebuilding Service
Lservices:L18045-R	Rebuild Hudaille Shock Absorbers, exch.
Lservices:Ldistrbld	Rebuild distributor
Lservices:Machine battery ...	Mill cavity in bottom of battery to allow case to...
Lservices:Machining	Machining our parts
Lservices:Machining:Lcasti...	Install and tack weld crankshaft casting plugs
Lservices:Re-key	Re-key lock
Lservices:Test/adj.	Test and adjust or calibrate to specifications
Lservices:Valve seats	Grind valve seats
Lspray paint	Spray paint for the Defroster, Heaters, top iron...
Lstamp/fab	Fabricate 'U' clevis for hand brake cable
Lstatic-supres	Static supression Condensers
LTE-13	Window to top frame seal moleskin cover
LTE-9B	Headlight bucket gasket, pr.
LTI-3	Door lock knob escutcheons, brass, pr, '40-8 LC
LTI-4a	Carpet grommet, OD kick down sw.
LTI-4b	Carpet grommet -Large
LTires	700-16 radial tire
Ltop rivet set	Set of 10 top iron rivets (new stainless "rivets"...
Ltopirinrivet	Top iron rivet set
Ltrans O/H kit	Transmission overhaul kit with all gears, shaft...

Lucas-72630
Lvalve bar
Lvalve stem cap
Lw/s frame
Lweatherstrip
Lwiring
Lwiring-'47 LC cp
Lwiring '46 cp/ca
Lxxx
Lxxx
LZ cell connect
LZ emblem

Wiper wheelbox assy
valve bar tool
Valve stem cap set, 4 plus 1 spare valve remo...
Windshield inner frame

Wiring harnesses,per list:
Headlight bucket wires, pair \$53; Parking and ...
Rhode Island Wiring:Per list attached:
Steering Column Assy
Steering wheel
LZ cell Connectors
Rubber Lincoln Zephyr tear-drop emblem, pai...

